


GASKET SIZING GUIDE

Approximate Cup Rim Diameter		Approximate Cup Size Range	Gasket Size	REPLACEMENT GASKET KITS		Quantity of Gaskets in Kit
minimum	maximum			Part Numbers		
				black	white	
2 ⁷ / ₈ " (73 mm)	3 ¹ / ₈ " (79 mm)	8 oz (236 mL) to 14 oz (414 mL)	SMALL	XC2422SBK	XC2422S	3
3 ¹ / ₂ " (89 mm)	3 ⁷ / ₈ " (98 mm)	16 oz (474 mL) to 24 oz (710 mL)	MEDIUM	XC2422MBK	XC2422M	3
4 ³ / ₁₆ " (106 mm)	4 ³ / ₈ " (111 mm)	32 oz (947 mL)	LARGE	XC2422LBK	XC2422L	3
4 ¹ / ₂ " (114 mm)	4 ³ / ₄ " (121 mm)	32 oz (947 mL) to 46 oz (1360 mL)	EXTRA LARGE	XC2422XLBK	XC2422XL	3
Additional intermediate gasket sizes are available. Please call Customer Care for more information.					XC2426 One each-Small, Medium, Large, Extra Large	4


HOW TO DETERMINE WHICH GASKET TO USE

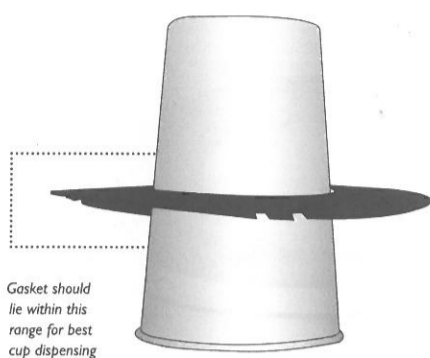

Gasket should lie within this range for best cup dispensing performance.

1. Turn cup upside down.
2. Affix gasket over cup. Gasket should rest about 2/3 of the way down from rim of cup.
3. When gasket fits appropriately, this indicates the correct gasket size to use.

SMALL GROUPING OF HOLES ON EDGE INDICATE GASKET SIZE (SEE CHART)

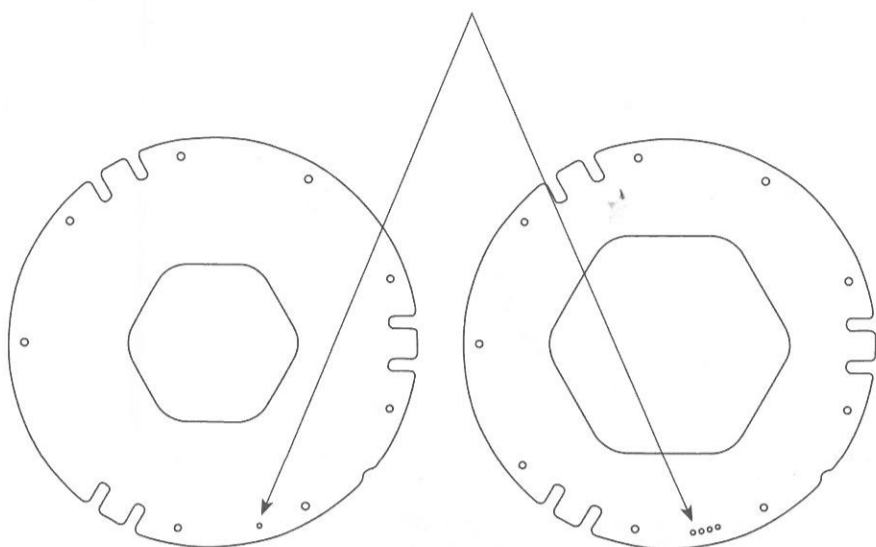

# OF HOLES	GASKET SIZE	PART #
○	SMALL	XC2422S
○ ○	MEDIUM	XC2422M
○ ○ ○	LARGE	XC2422L
○ ○ ○ ○	EXTRA LARGE	XC2422XL

San Jamar
555 Koopman Lane
Elkhorn, Wisconsin 53121
USA
T: +1.262.723.6133
F: +1.262.723.4204
info@sanjamar.com
www.sanjamar.com

Canada
15252 32nd Avenue
Suite 309
Surrey, BC V3S 0R7
CANADA
T: +1.262.723.6133
F: +1.262.723.4204
canada@sanjamar.com

Europe
Schoorstraat 26a, bus 1
2220 Heist op-den Berg
BELGIUM
T: +32 1522 8140
F: +32 1522 8148
emea@sanjamar.com

México
Av. Universidad #1377-701
Colonia Axotla CP 01030
Del. Alvaro Obregón
MEXICO, D.F.
T: +52 (55) 3626 0772
F: +52 (55) 5273 4495
mexico@sanjamar.com



© Copyright San Jamar, Inc. 2015

C2419_RevE


C2410C EZ-FIT® CUP DISPENSER INSTALLATION INSTRUCTIONS

1. CUT HOLE IN COUNTER SURFACE




2. REMOVE TRIM RING TURNING COUNTER CLOCKWISE

3. SECURE CUP DISPENSER TO COUNTER WITH SUPPLIED SCREWS

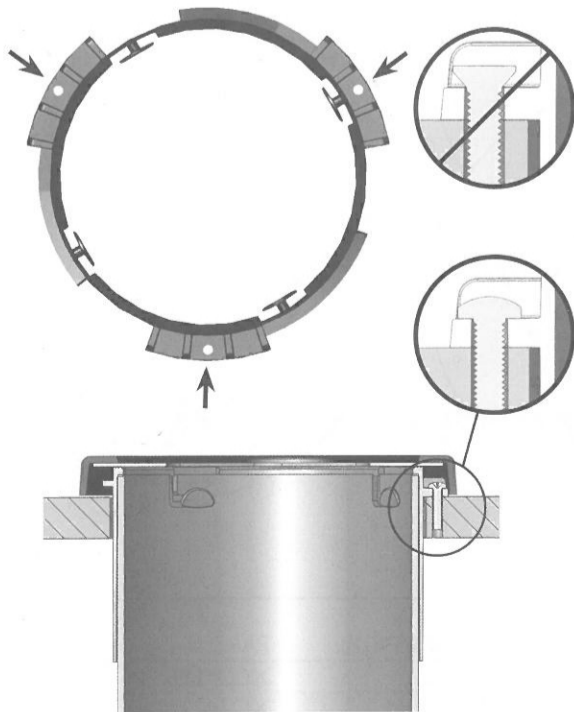


4. SELECT PROPER SIZE GASKET FOR CUP (SEE TABLE ON BACK)


5. INSTALL GASKET OVER POSTS IN UNDERSIDE OF RING

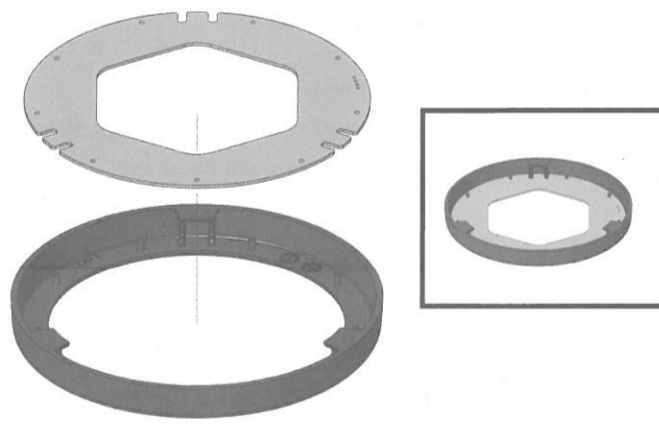

6. REPLACE COVER RING WITH GASKET BY TURNING CLOCKWISE OVER MOUNTING RING UNTIL SECURE

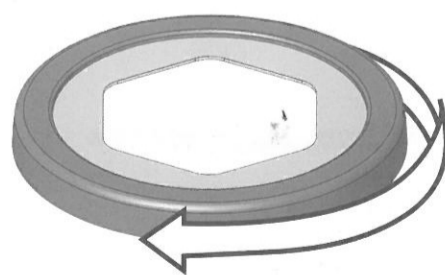

7. LOAD CUPS THROUGH GASKET

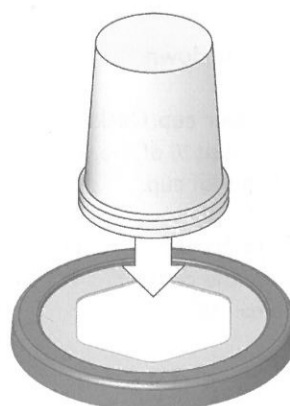

REPLACEMENT PARTS & ACCESSORIES (see reverse side for replacement gaskets)

X24MT Black Mounting Ring (new low profile)
X24TR Black Trim Ring (new low profile)
XC24KIT Replacement Trim Rings (old & new)

C2415 Spring
C2413BK End Cap
100458BK Cup Pusher

C2412SV Wire Cage for Surface Mount
C24XC Chrome Finish Trim Ring