


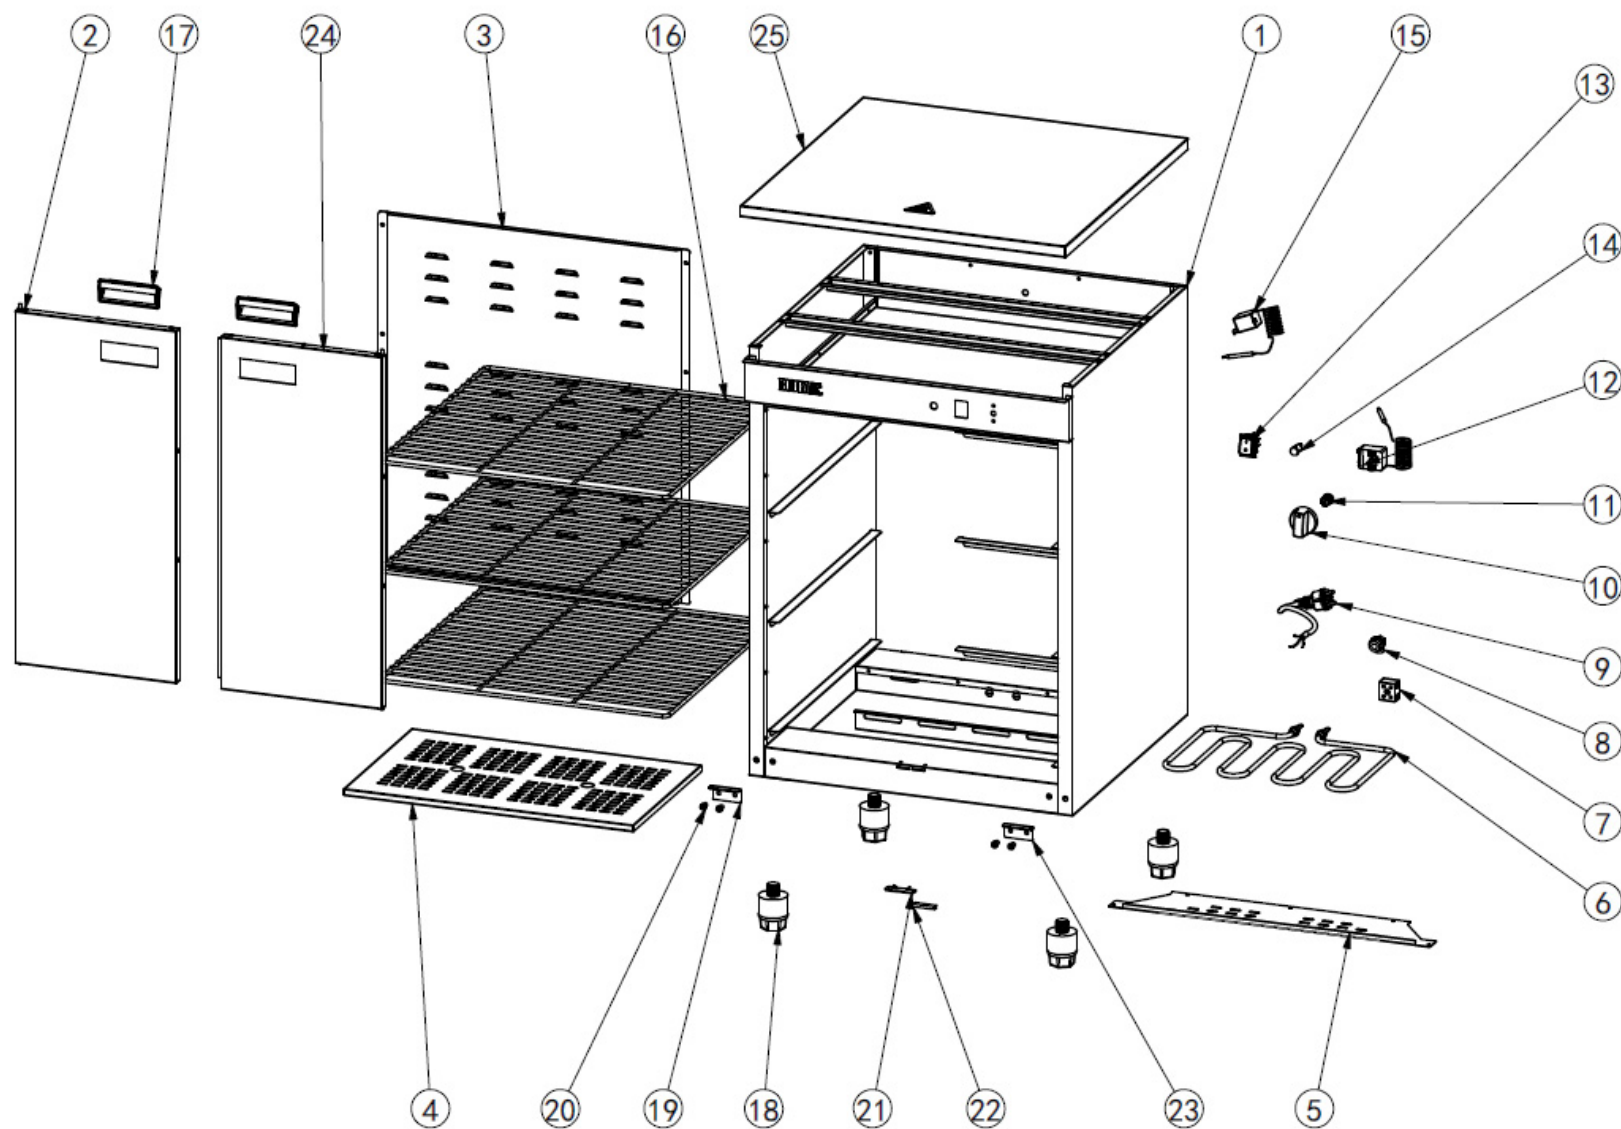

Machine	Explode	Code	Description
GP452-A Apuro Double Door Plate Warmer	1		Housing
GP452-A Apuro Double Door Plate Warmer	2		Front Door Assembly
GP452-A Apuro Double Door Plate Warmer	3		Rear Sealing Plate
GP452-A Apuro Double Door Plate Warmer	4		Heat Pipe Cover Plate
GP452-A Apuro Double Door Plate Warmer	5		Bottom Plate
GP452-A Apuro Double Door Plate Warmer	6	AS805	Heating Element
GP452-A Apuro Double Door Plate Warmer	7	AK025	Ceramic Terminal Block
GP452-A Apuro Double Door Plate Warmer	8	AL187	Power Cable Head
GP452-A Apuro Double Door Plate Warmer	9	AL186	UK Power Cord
GP452-A Apuro Double Door Plate Warmer	10	AS009	Knob
GP452-A Apuro Double Door Plate Warmer	11	AS011	Knob Core
GP452-A Apuro Double Door Plate Warmer	12	AS430	Temperature Controller
GP452-A Apuro Double Door Plate Warmer	13	AS020	On/Off Switch
GP452-A Apuro Double Door Plate Warmer	14	AS007	Green Indicator Light
GP452-A Apuro Double Door Plate Warmer	15		Temperature limiter
GP452-A Apuro Double Door Plate Warmer	16	AS808	Wire Shelf
GP452-A Apuro Double Door Plate Warmer	17	AS809	Black Handle
GP452-A Apuro Double Door Plate Warmer	18	AS810	Adjustable Feet (set 4)
GP452-A Apuro Double Door Plate Warmer	19		Left Door Support Plate
GP452-A Apuro Double Door Plate Warmer	20		Screw
GP452-A Apuro Double Door Plate Warmer	21	AS811	Magnetic Suction Plate
GP452-A Apuro Double Door Plate Warmer	22		Magnet
GP452-A Apuro Double Door Plate Warmer	23		Left Door Support Plate
GP452-A Apuro Double Door Plate Warmer	24		Right Door Support Plate
GP452-A Apuro Double Door Plate Warmer	25		Top Cover Plate