



Machine	Explode	Code	Description
Apuro Bakery Convection Oven with Steam 100Ltr	1	AW172	Door Seal
Apuro Bakery Convection Oven with Steam 100Ltr	2	AW173	Door Assembly
Apuro Bakery Convection Oven with Steam 100Ltr	3	AW174	Timer
Apuro Bakery Convection Oven with Steam 100Ltr	4	AW175	Timer Knob
Apuro Bakery Convection Oven with Steam 100Ltr	5	AW176	Power/Red Indication Light
Apuro Bakery Convection Oven with Steam 100Ltr	6	AW177	Working/Green Indication Light
Apuro Bakery Convection Oven with Steam 100Ltr	7	AW178	Temperature Knob
Apuro Bakery Convection Oven with Steam 100Ltr	8	AW179	Thermostat
Apuro Bakery Convection Oven with Steam 100Ltr	9	AW180	Manual Humidity Button
Apuro Bakery Convection Oven with Steam 100Ltr	10	AW181	Feet (set 4)
Apuro Bakery Convection Oven with Steam 100Ltr	11	AW182	Door Switch
Apuro Bakery Convection Oven with Steam 100Ltr	12	AW183	Internal Light
Apuro Bakery Convection Oven with Steam 100Ltr	13	AW184	Wire Buckle
Apuro Bakery Convection Oven with Steam 100Ltr	14	AW185	Temperature Limiter
Apuro Bakery Convection Oven with Steam 100Ltr	15	AW186	AC Conductor
Apuro Bakery Convection Oven with Steam 100Ltr	16		AUS Power Cord
Apuro Bakery Convection Oven with Steam 100Ltr	17	AW188	Heating Element
Apuro Bakery Convection Oven with Steam 100Ltr	18	AW189	Fan Motor
Apuro Bakery Convection Oven with Steam 100Ltr	19	AW190	Water Pump
Apuro Bakery Convection Oven with Steam 100Ltr	20	AW191	Rebound Device
Apuro Bakery Convection Oven with Steam 100Ltr	21	AW192	Water Tank
Apuro Bakery Convection Oven with Steam 100Ltr	22	AW193	Shelf
Apuro Bakery Convection Oven with Steam 100Ltr	23		Terminal