

NISBETS **ESSENTIALS**

Contact grill

Instruction manual



Model:
DA396-A

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- **Caution! Hot surface!** The temperature of the heating surface and other accessible surface is very high during use. Touch the temperature control knob only.
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT move or carry the appliance when it is switched on.
- DO NOT leave the appliance unattended during operation.
- Always use oven gloves when cooking or carrying out any adjustments to the appliance.
- Where this appliance is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc., it is recommended that they be made of non-combustible material; if not, they shall be clad with suitable with non-combustible heat-insulating material, and the closest attention be paid to fire prevention regulations.
- Do not obstruct any ventilation openings in the appliance body.
- Always use the black handle to lift the plate.
- Always switch off and disconnect the power supply to the appliance when not in use.



- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Nisbets Essentials agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Nisbets Essentials recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Nisbets Essentials product.

This appliance is intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals, etc. but not for household and industrial use.

Pack Contents

The following is included:

- Nisbets Essentials Single Cast Iron Plate Contact Grill (Ribbed/Flat) - 1.8kW
- Waste tray
- Brush
- Instruction manual

Nisbets Essentials prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Nisbets Essentials dealer immediately.

 
Installation

1. Place the unit on a heat-resistant surface. Avoid placing it on or close to flammable materials. Maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation.
2. Keep the unit away from splashing water and countertop's edge.



Note: Before using for the first time, clean the appliance with warm soapy water. Let dry completely.

Operation

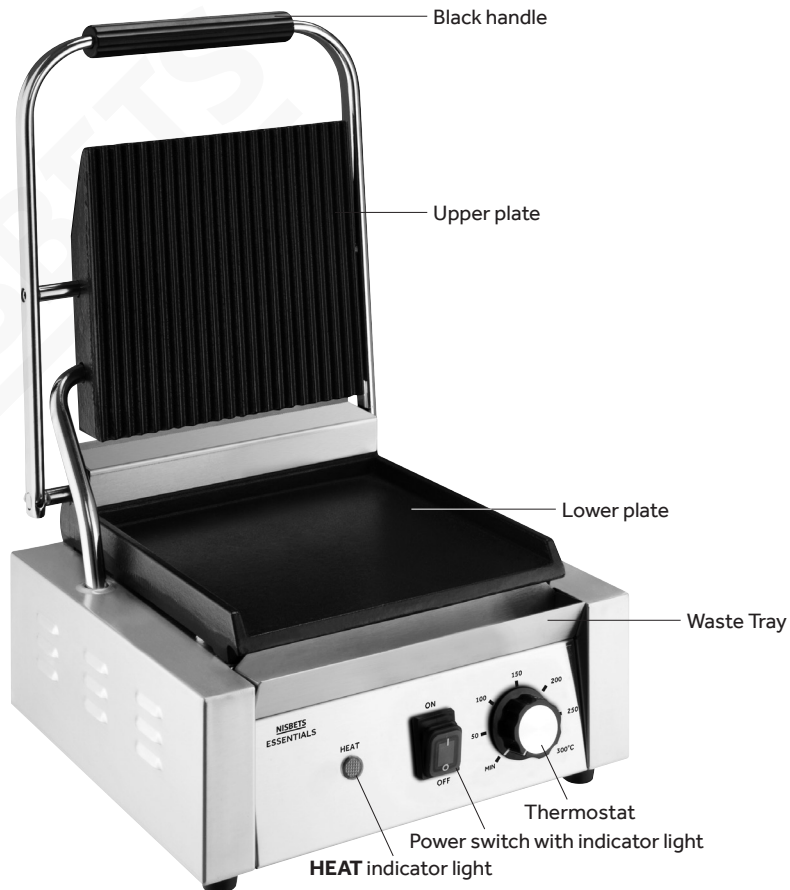

Seasoning the Griddle Plate

Before using for the first time the cooking surface needs to be seasoned.

1. Ensure the cooking surface is clean.
2. Brush the surface with cooking oil.
3. Connect the appliance to the mains power supply.
4. **Turning on:** Set the power switch to **I** position.
5. Set the thermostat to 50°C. The **HEAT** indicator light turns on.
6. Once the set temperature is reached, the **HEAT** indicator light turns off.
7. Turn the appliance Off and allow to cool before wiping away any excess oil.
8. The appliance is now ready for use.

Cooking



Note: It is recommended the cooking surface is lightly oiled before cooking.

1. Close the plates.
2. Connect the appliance to the mains power supply.
3. Turn the appliance on. The power indicator light (green) illuminates.
4. Set the thermostat to the desired temperature (50°C-300°C). The **HEAT** indicator light (orange) turns On and the appliance begins to heat up.



Note: 200°C to 220°C is suitable for general cooking.

5. When the set temperature is reached, the **HEAT** indicator light turns Off.



Note: During use, the HEAT indicator light will cycle on/off, indicating the set temperature is being maintained.

6. Lift the upper plate and place the foodstuff on the lower plate.
7. Lower the upper plate.
8. **Turning off:** After use, set the thermostat to **MIN** position and power switch to **O** position.

Overheat protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power.

The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

 
 
1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

Adjusting Top Plate Tension




Note: If top plate becomes loose/ stiff use an Allen key to adjust the tension. Nisbets Essentials recommend the appliance is disconnected from the power supply and allowed to cool before any adjustments are made.

1. Remove the screw fixing the back cover then remove the back cover.

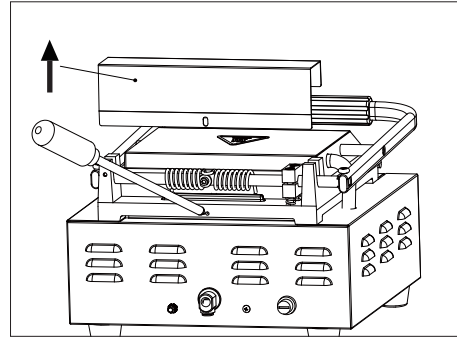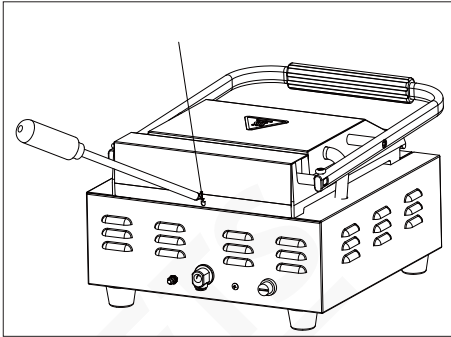

 2. Use an Allen key to adjust the tension of the top plate. Turn clockwise to tighten, anticlockwise to loosen.
3. Replace the back cover and tighten the screw.

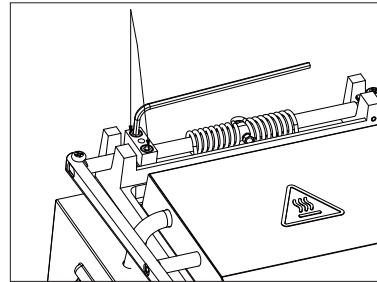

Cleaning, Care & Maintenance



Warning:
Always turn off and disconnect the appliance from the power supply before cleaning.
Always allow the appliance to cool before cleaning.

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this follow the cleaning steps below:

- Regularly remove excess grease or fat using a cloth dampened with hot soapy water.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.

For best performance, Nisbets Essentials recommend that the appliance is cleaned after each day of operation.

Failure to clean the appliance regularly may result in premature activation of the thermal cut-out switch.

Scraping

- After each use, scrape the appliance with a soft plastic or wooden scraper to remove excess fat and food.
- If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned.



Caution:

**It is vital that the cooking surface is re-seasoned after scouring.
Do not use steel wool as it may leave shards that could contaminate food.**

Waste Tray

- This appliance is featured with a waste tray to collect any liquid or fats that run off during cooking.
- At least once a day, remove and empty the waste tray before washing with warm soapy water. Do not allow the tray to overflow.



Warning: DO NOT remove the tray during or immediately after use as the contents are still hot.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Mains power supply fault	Check mains power supply
HEAT indicator light comes on but appliance does not heat up	Faulty element	Consult a qualified Technician
	Faulty thermostat	Consult a qualified Technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface
	Faulty element	Consult a qualified Technician
Surface flaking	Build up of carbonised food debris	Refer to "Cleaning, Care & Maintenance" section
No power	Thermal cut-out switch has activated	Press re-set switch on rear of unit

Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Voltage	Power	Current	Dimensions h x w x d (mm)	Weight
DA396-A	220-240V~ 50Hz-60Hz	1800W	7.8A	200 x 310 x 360	13kg

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Nisbets Essentials parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Nisbets Essentials products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Nisbets Essentials.

Every effort is made to ensure all details are correct at the time of going to press, however, Nisbets Essentials reserves the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo	Model • Modèle • Modell • Modello • Modelo
Single Cast Iron Plate Contact Grill (Ribbed/Flat)	DA396 (-E & -A)
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo	Low Voltage Directive (LVD) - 2014/35/EU Electrical Equipment (Safety) Regulations 2016 EN 60335-1:2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021 +A16:2023 EN 60335-2-38: 2003 +A1:2008 EN62233:2008 Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091) EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019 +A1:2021 EN 61000-3-3:2013 +A2:2021 Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)
Electrical Safety IEC 60335-1:2010 +A1:2013 +A2:2016 IEC 60335-2-38: 2002 +A1:2008 +A2:2017 Electromagnetic Compatibility EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019 +A1:2021 EN 61000-3-3:2013 +A2:2021	
Manufacturer Name • Naam fabrikant • Nom du fabricant • Name des Herstellers • Nome del fabbricante • Nombre del fabricante	Nisbets Limited

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Date • Data • Date • Datum • Data •

Fecha

Signature • Handtekening •

Signature • Unterschrift Firma •

Firma

Full Name • Volledige naam • Nom et

prénom • Vollständiger Name • Nome

completo • Nombre completo

Position • Functie • Fonction •

Position • Qualifica • Posición

Manufacturer Address • Adres

fabrikant • Adresse du fabricant •

Adresse des Herstellers • Indirizzo del

fabbricante • Dirección del fabricante

13th Nov 2024

DocuSigned by:

Ashley Hooper

B39382C9FD9C478...

DocuSigned by:

Eoghan Donnellan

D352874F7FAB480...

DocuSigned by:

Brendan Denneade

386FAD00DFE8483...

Ashley Hooper

Eoghan Donnellan

Brendan Denneade

Group Head of Product
Quality & Compliance

Commercial Manager/
Importer

Commercial Manager/
Responsible
Supplier

Fourth Way,
Avonmouth,
Bristol,
BS11 8TB
United Kingdom

Unit 9003,
Blarney Business Park,
Blarney,
Co. Cork
Ireland

15 Badgally Road,
Campbelltown
NSW 2560



NISBETS
ESSENTIALS



<http://www.nisbets.com/> 

DA396-A_A5_v2_2024/11/15