


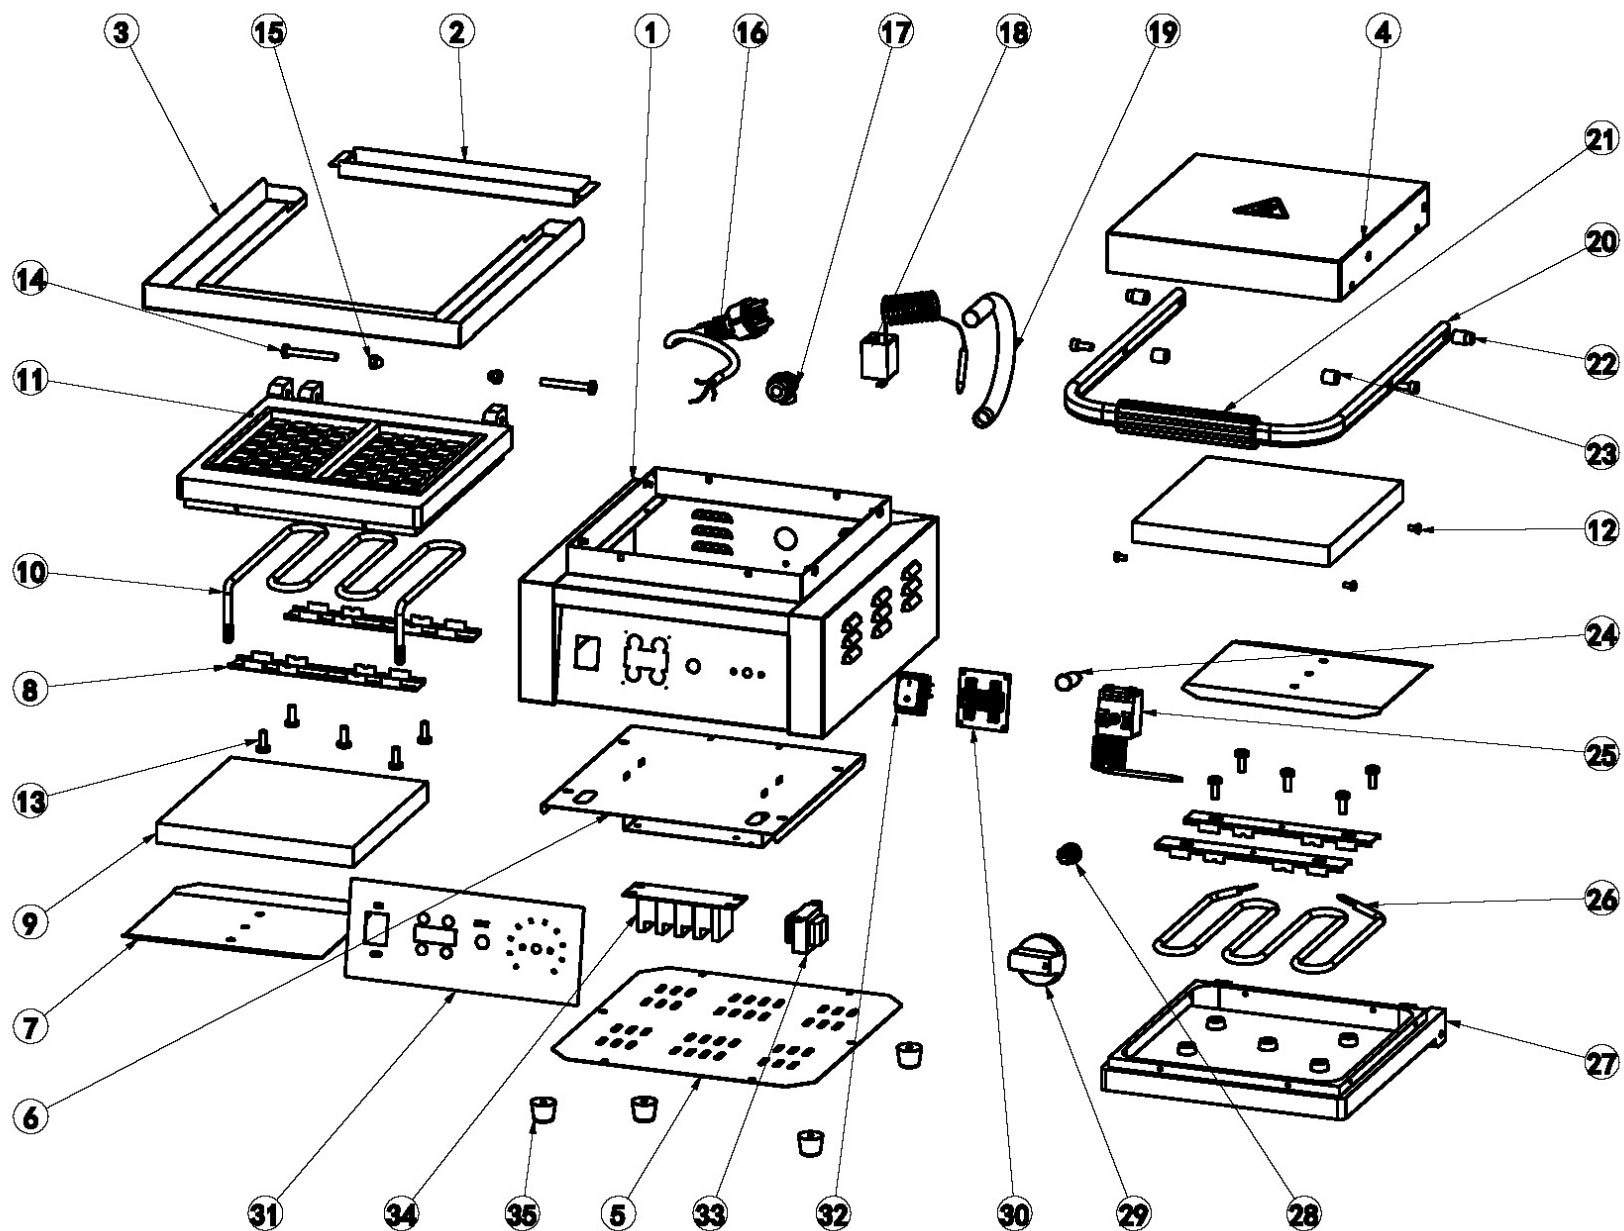

Machine	Explode	Code	Description
HOST0684WM - HOST Waffle Maker	1		Body Frame
HOST0684WM - HOST Waffle Maker	2		Crumb Tray(Back Side)
HOST0684WM - HOST Waffle Maker	3		Crumb Tray(Front Side)
HOST0684WM - HOST Waffle Maker	4		Top Cover
HOST0684WM - HOST Waffle Maker	5		Bottom Baseboard
HOST0684WM - HOST Waffle Maker	6		Heatproof Board
HOST0684WM - HOST Waffle Maker	7		Pressure Plate
HOST0684WM - HOST Waffle Maker	8		Heat Pipes Fixed Plate
HOST0684WM - HOST Waffle Maker	9		Insulation Cotton
HOST0684WM - HOST Waffle Maker	10	AK029	Heating Element Pipe(Low)
HOST0684WM - HOST Waffle Maker	11		Griddle Plate(Low)
HOST0684WM - HOST Waffle Maker	12		Screw
HOST0684WM - HOST Waffle Maker	13		Screw
HOST0684WM - HOST Waffle Maker	14		Screw
HOST0684WM - HOST Waffle Maker	15		Nut
HOST0684WM - HOST Waffle Maker	16	AL186	Power Cord
HOST0684WM - HOST Waffle Maker	17	AL187	The Power Cord Connector
HOST0684WM - HOST Waffle Maker	18	AM299	Thermostat Cut Out
HOST0684WM - HOST Waffle Maker	19		Coil-In Tube
HOST0684WM - HOST Waffle Maker	20		Handle
HOST0684WM - HOST Waffle Maker	21		Plastic Protector Handle
HOST0684WM - HOST Waffle Maker	22		M6 Screw
HOST0684WM - HOST Waffle Maker	23		Stainless Steel Sleeve
HOST0684WM - HOST Waffle Maker	24	AJ264	Indicator Light
HOST0684WM - HOST Waffle Maker	25	AK031	Thermostat
HOST0684WM - HOST Waffle Maker	26	AK028	Heating Element Pipe(Up)
HOST0684WM - HOST Waffle Maker	27		Griddle Plate(Up)
HOST0684WM - HOST Waffle Maker	28		Knob Core
HOST0684WM - HOST Waffle Maker	29		Knob
HOST0684WM - HOST Waffle Maker	30		PCB Timer
HOST0684WM - HOST Waffle Maker	31		Panel Sticker
HOST0684WM - HOST Waffle Maker	32	AJ263	On/Off Switch
HOST0684WM - HOST Waffle Maker	33		Transformer
HOST0684WM - HOST Waffle Maker	34		Terminal Row
HOST0684WM - HOST Waffle Maker	35	AK017	Rubber Leg