


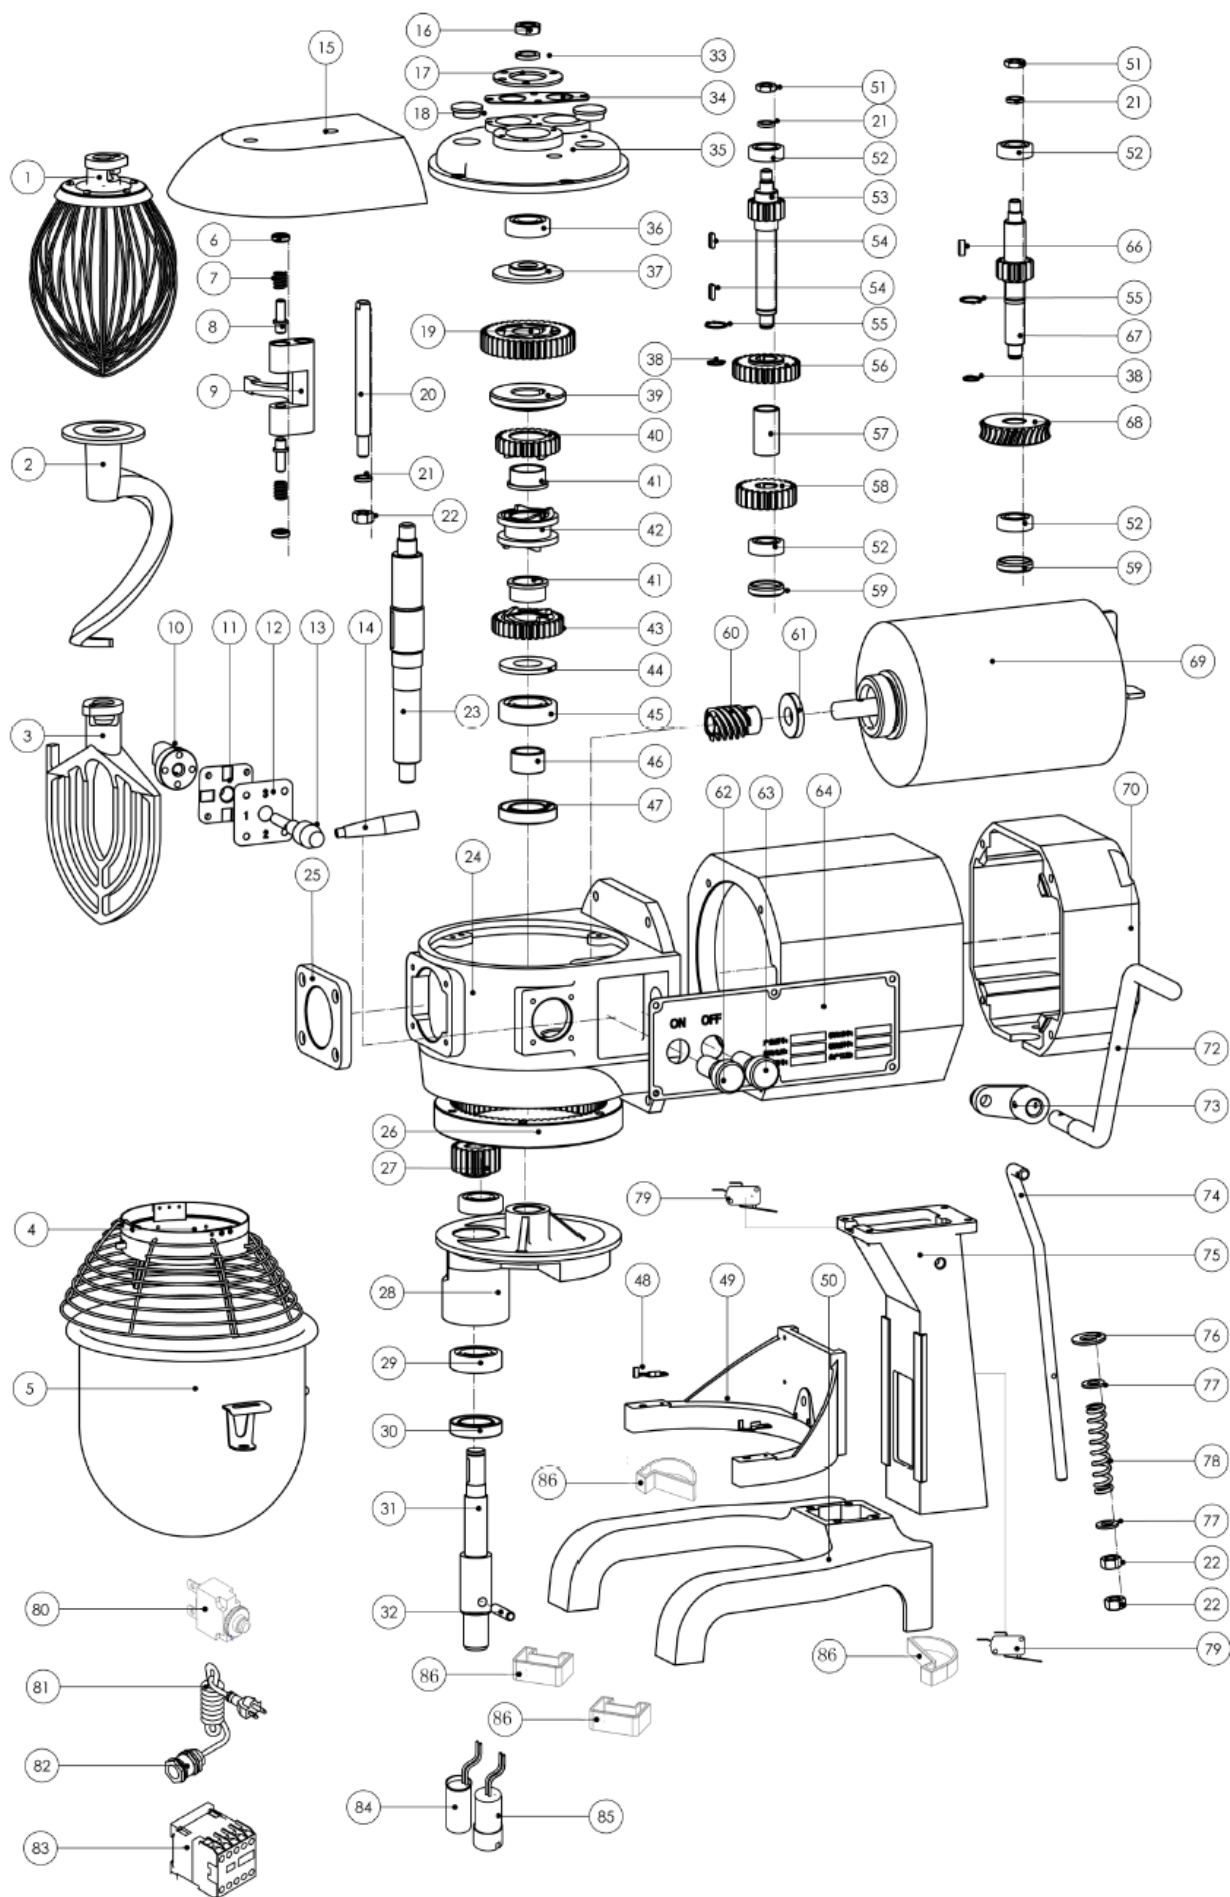

Machine	Explode	Code	Description
HOST0903PM - HOST Planetary Mixer - 20Ltr	1	AF520	Wire Whip
HOST0903PM - HOST Planetary Mixer - 20Ltr	2	AF521	Spiral Dough Hook
HOST0903PM - HOST Planetary Mixer - 20Ltr	3	AF522	Flat Beater
HOST0903PM - HOST Planetary Mixer - 20Ltr	4	AF523	Safety Guard
HOST0903PM - HOST Planetary Mixer - 20Ltr	N/A	AM464	Plastic Block for Safety Guard AF523
HOST0903PM - HOST Planetary Mixer - 20Ltr	5	AF524	Bowl Assembly
HOST0903PM - HOST Planetary Mixer - 20Ltr	N/A	AM465	Locking Pin for Bowl AF524
HOST0903PM - HOST Planetary Mixer - 20Ltr	6	AN152	Cap
HOST0903PM - HOST Planetary Mixer - 20Ltr	7	AN153	Spring
HOST0903PM - HOST Planetary Mixer - 20Ltr	8	AN154	Pin Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	9	AN155	Shifting Yoke
HOST0903PM - HOST Planetary Mixer - 20Ltr	10-14	AJ785	Handle Assembly
HOST0903PM - HOST Planetary Mixer - 20Ltr	15		Hood
HOST0903PM - HOST Planetary Mixer - 20Ltr	16		Nut
HOST0903PM - HOST Planetary Mixer - 20Ltr	17		Pressing Plate
HOST0903PM - HOST Planetary Mixer - 20Ltr	18	AN520	Plug Cover
HOST0903PM - HOST Planetary Mixer - 20Ltr	19,23,37	AH077	Gear Selector
HOST0903PM - HOST Planetary Mixer - 20Ltr	39-45		
HOST0903PM - HOST Planetary Mixer - 20Ltr	20	AN156	Declutch Shift Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	21	AN030	Washer
HOST0903PM - HOST Planetary Mixer - 20Ltr	22	AN031	Nut
HOST0903PM - HOST Planetary Mixer - 20Ltr	24		Gear Box
HOST0903PM - HOST Planetary Mixer - 20Ltr	25	AM211	End Cap
HOST0903PM - HOST Planetary Mixer - 20Ltr	26		Internal Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	27	AM755	Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	28		Operating Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	N/A	AL683	Nut for Operating Shelf
HOST0903PM - HOST Planetary Mixer - 20Ltr	29	AL828	Bearing
HOST0903PM - HOST Planetary Mixer - 20Ltr	30	AL829	Oil Seal
HOST0903PM - HOST Planetary Mixer - 20Ltr	31	AL501	Working Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	32	AF519	Retainer Pin
HOST0903PM - HOST Planetary Mixer - 20Ltr	33	AL502	Spring
HOST0903PM - HOST Planetary Mixer - 20Ltr	34		Pressing Plate
HOST0903PM - HOST Planetary Mixer - 20Ltr	35		Transmission Support
HOST0903PM - HOST Planetary Mixer - 20Ltr	N/A		Retaining Bolts for Transmission Support
HOST0903PM - HOST Planetary Mixer - 20Ltr	36	AN732	Bearing
HOST0903PM - HOST Planetary Mixer - 20Ltr	38	AM756	Circlips for Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	46	AM757	Bushing
HOST0903PM - HOST Planetary Mixer - 20Ltr	47	AL943	Oil Seal
HOST0903PM - HOST Planetary Mixer - 20Ltr	48	AL801	Locking Clamp
HOST0903PM - HOST Planetary Mixer - 20Ltr	49		Bowl Support
HOST0903PM - HOST Planetary Mixer - 20Ltr	50		Case
HOST0903PM - HOST Planetary Mixer - 20Ltr	51		Nut

HOST0903PM - HOST Planetary Mixer - 20Ltr	52	AN781	Bearing
HOST0903PM - HOST Planetary Mixer - 20Ltr	53	AM892	Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	54		Key
HOST0903PM - HOST Planetary Mixer - 20Ltr	55	AN782	Circlips for Shaft
HOST0903PM - HOST Planetary Mixer - 20Ltr	56		Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	57		Bushing
HOST0903PM - HOST Planetary Mixer - 20Ltr	58		Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	59	AN783	Washer
HOST0903PM - HOST Planetary Mixer - 20Ltr	60	AF529	Worm wheel
HOST0903PM - HOST Planetary Mixer - 20Ltr	69		Motor (With Tool)
HOST0903PM - HOST Planetary Mixer - 20Ltr	61	AM814	Oil seal
HOST0903PM - HOST Planetary Mixer - 20Ltr	63		On-Off Button
HOST0903PM - HOST Planetary Mixer - 20Ltr	64		Panel
HOST0903PM - HOST Planetary Mixer - 20Ltr	65		Motor Housing
HOST0903PM - HOST Planetary Mixer - 20Ltr	66	AN784	Key
HOST0903PM - HOST Planetary Mixer - 20Ltr	67	AN785	Shaft Worm Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	68	AN484	Worm Wheel/Gear
HOST0903PM - HOST Planetary Mixer - 20Ltr	70		Rear Casing
HOST0903PM - HOST Planetary Mixer - 20Ltr	72	AL434	Handle-shifter
HOST0903PM - HOST Planetary Mixer - 20Ltr	73	AL435	Crank Lever
HOST0903PM - HOST Planetary Mixer - 20Ltr	74	AL607	Connecting Rod
HOST0903PM - HOST Planetary Mixer - 20Ltr	75		Pillar
HOST0903PM - HOST Planetary Mixer - 20Ltr	76	AL751	Clamp Plate
HOST0903PM - HOST Planetary Mixer - 20Ltr	77	AL752	Clamp Plate
HOST0903PM - HOST Planetary Mixer - 20Ltr	78	AL753	Spring
HOST0903PM - HOST Planetary Mixer - 20Ltr	79	AJ134	Safety Switch
HOST0903PM - HOST Planetary Mixer - 20Ltr	80	AF530	Overload Switch
HOST0903PM - HOST Planetary Mixer - 20Ltr	81		Power Cord
HOST0903PM - HOST Planetary Mixer - 20Ltr	82	AF531	Gland
HOST0903PM - HOST Planetary Mixer - 20Ltr	83	AF532	Contact Switch
HOST0903PM - HOST Planetary Mixer - 20Ltr	84	AF533	Capacitor
HOST0903PM - HOST Planetary Mixer - 20Ltr	85	AF534	Start Capacitor
HOST0903PM - HOST Planetary Mixer - 20Ltr	86	AH070	Rubber Feet