


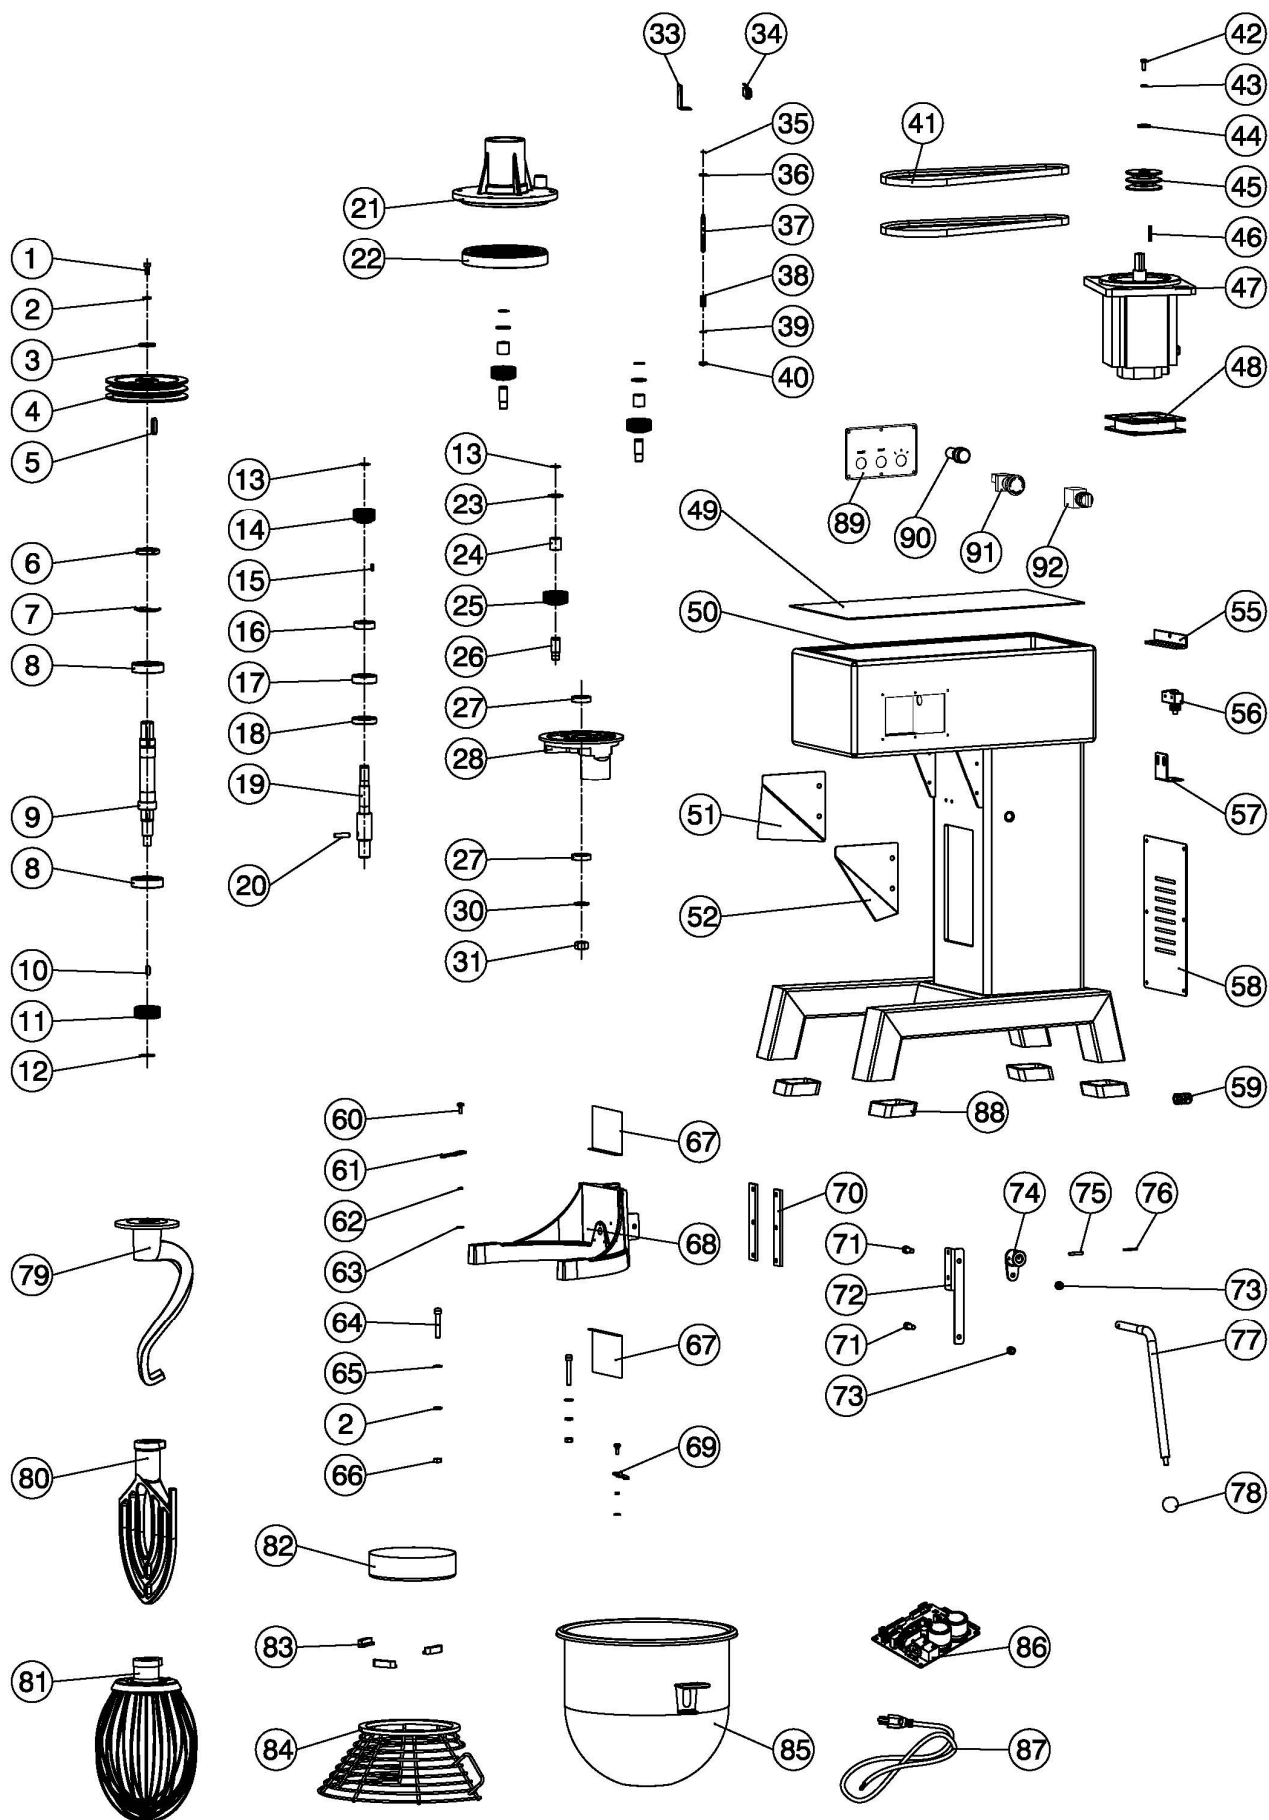

Machine	Explode	Code	Description
HT253 - Host Planetary Mixer - 20Ltr	1		Bolt
HT253 - Host Planetary Mixer - 20Ltr	2		Spring Washer
HT253 - Host Planetary Mixer - 20Ltr	3		Gasket
HT253 - Host Planetary Mixer - 20Ltr	4		Spindle Pulley
HT253 - Host Planetary Mixer - 20Ltr	5		Key
HT253 - Host Planetary Mixer - 20Ltr	6		Nut
HT253 - Host Planetary Mixer - 20Ltr	7		Washer
HT253 - Host Planetary Mixer - 20Ltr	8		Bearing
HT253 - Host Planetary Mixer - 20Ltr	9	AX004	Main Shaft
HT253 - Host Planetary Mixer - 20Ltr	10		Key
HT253 - Host Planetary Mixer - 20Ltr	11		Gear
HT253 - Host Planetary Mixer - 20Ltr	12		Circlip For Shaft
HT253 - Host Planetary Mixer - 20Ltr	13		Circlip For Shaft
HT253 - Host Planetary Mixer - 20Ltr	14	AX005	Planet Gear
HT253 - Host Planetary Mixer - 20Ltr	15		Key
HT253 - Host Planetary Mixer - 20Ltr	16		Bearing
HT253 - Host Planetary Mixer - 20Ltr	17		Bearing
HT253 - Host Planetary Mixer - 20Ltr	18		Oil Seal
HT253 - Host Planetary Mixer - 20Ltr	19	AX006	Working Shaft
HT253 - Host Planetary Mixer - 20Ltr	20		Retainer Pin
HT253 - Host Planetary Mixer - 20Ltr	21		Bearing Seat
HT253 - Host Planetary Mixer - 20Ltr	22		Inner Gear
HT253 - Host Planetary Mixer - 20Ltr	23		Gasket
HT253 - Host Planetary Mixer - 20Ltr	24		Bushing
HT253 - Host Planetary Mixer - 20Ltr	25	AX007	Gear
HT253 - Host Planetary Mixer - 20Ltr	26	AX008	Planet Shaft
HT253 - Host Planetary Mixer - 20Ltr	27		Bearing
HT253 - Host Planetary Mixer - 20Ltr	28		Moving Frame
HT253 - Host Planetary Mixer - 20Ltr	30		Flat Washer
HT253 - Host Planetary Mixer - 20Ltr	31		Nut
HT253 - Host Planetary Mixer - 20Ltr	33		Micro Switch Support
HT253 - Host Planetary Mixer - 20Ltr	34	AX009	Travel Switch
HT253 - Host Planetary Mixer - 20Ltr	35		Split Washer
HT253 - Host Planetary Mixer - 20Ltr	36		Gasket
HT253 - Host Planetary Mixer - 20Ltr	37	AX010	Switch Shaft
HT253 - Host Planetary Mixer - 20Ltr	38		Compressing Spring
HT253 - Host Planetary Mixer - 20Ltr	39		Split Washer
HT253 - Host Planetary Mixer - 20Ltr	40		Adjusting Screw
HT253 - Host Planetary Mixer - 20Ltr	41	AX011	Belt
HT253 - Host Planetary Mixer - 20Ltr	42		Bolt
HT253 - Host Planetary Mixer - 20Ltr	43		Spring Washer
HT253 - Host Planetary Mixer - 20Ltr	44		Gasket
HT253 - Host Planetary Mixer - 20Ltr	45	AX012	Motor Pulley
HT253 - Host Planetary Mixer - 20Ltr	46		Key
HT253 - Host Planetary Mixer - 20Ltr	47	AX013	Motor

Machine	Explode	Code	Description
HT253 - Host Planetary Mixer - 20Ltr	48	AX014	Fan
HT253 - Host Planetary Mixer - 20Ltr	49	AX015	Chassis Cover
HT253 - Host Planetary Mixer - 20Ltr	50		Body
HT253 - Host Planetary Mixer - 20Ltr	51		Left Guard Board
HT253 - Host Planetary Mixer - 20Ltr	52		Right Guard Board
HT253 - Host Planetary Mixer - 20Ltr	55		Motor Tightening Block
HT253 - Host Planetary Mixer - 20Ltr	56	AX016	Travel Switch
HT253 - Host Planetary Mixer - 20Ltr	57		Travel Switch Support
HT253 - Host Planetary Mixer - 20Ltr	58		Back Cover
HT253 - Host Planetary Mixer - 20Ltr	59		Waterproof Joint
HT253 - Host Planetary Mixer - 20Ltr	60		Lock Screw
HT253 - Host Planetary Mixer - 20Ltr	61		Left Pressure Plate
HT253 - Host Planetary Mixer - 20Ltr	62		Lock Spring
HT253 - Host Planetary Mixer - 20Ltr	63		Flat Washer
HT253 - Host Planetary Mixer - 20Ltr	64	AX017	Locating Pin
HT253 - Host Planetary Mixer - 20Ltr	65		Flat Washer
HT253 - Host Planetary Mixer - 20Ltr	66		Nut
HT253 - Host Planetary Mixer - 20Ltr	67		Shield Plate
HT253 - Host Planetary Mixer - 20Ltr	68		Support
HT253 - Host Planetary Mixer - 20Ltr	69		Right Pressure Plate
HT253 - Host Planetary Mixer - 20Ltr	70		Rail Clip
HT253 - Host Planetary Mixer - 20Ltr	71		Screw
HT253 - Host Planetary Mixer - 20Ltr	72	AX018	Connecting Rod
HT253 - Host Planetary Mixer - 20Ltr	73		Nut
HT253 - Host Planetary Mixer - 20Ltr	74	AX019	Crank Lever
HT253 - Host Planetary Mixer - 20Ltr	75		Pin
HT253 - Host Planetary Mixer - 20Ltr	76		Pin
HT253 - Host Planetary Mixer - 20Ltr	77	AX020	Handle
HT253 - Host Planetary Mixer - 20Ltr	78		Handle Knob
HT253 - Host Planetary Mixer - 20Ltr	79	AF521	Spiral Dough Hook
HT253 - Host Planetary Mixer - 20Ltr	80	AF522	Flat Beater
HT253 - Host Planetary Mixer - 20Ltr	81	AF520	Wire Whip
HT253 - Host Planetary Mixer - 20Ltr	82	AX021	Hood Ring
HT253 - Host Planetary Mixer - 20Ltr	83		Stop Block
HT253 - Host Planetary Mixer - 20Ltr	84		Safety Guard
HT253 - Host Planetary Mixer - 20Ltr	85	AF524	Bowl Assembly
HT253 - Host Planetary Mixer - 20Ltr	86	AX022	Motor PCB
HT253 - Host Planetary Mixer - 20Ltr	87		UK Power Cord
HT253 - Host Planetary Mixer - 20Ltr	88	AX023	Rubber Feet (set 4)
HT253 - Host Planetary Mixer - 20Ltr	89	AX024	Rating Label
HT253 - Host Planetary Mixer - 20Ltr	90	AX025	Green Button
HT253 - Host Planetary Mixer - 20Ltr	91	AX026	Red Button
HT253 - Host Planetary Mixer - 20Ltr	92	AX027	Speed Control