

# HOST

**Pasta cooker**

**Instruction manual**

**Model:**

**HOST0562PC**



**Read this instruction  
manual carefully  
before use**

---

## **Safety Instructions**

---

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- Do not use the appliance for anything other than its intended use.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Ensure water levels are maintained above the minimum indicated level. Failing to do so may result in element failure.
- Switch off power to the appliance, and remove the plug from the power socket while cleaning, draining water, or filling with water.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

---

## Installation


---

- Remove the pasta cooker from the packaging, ensuring that all protective packaging, plastic and residues are thoroughly cleaned from its surfaces.
- Appliances should always be placed on the table when in use.
- Before locating and operating the pasta cooker, it is the user's responsibility to ensure that all Health & Safety regulations concerning safe positioning, spacing, ventilation, electrical installation, and fire risk, are complied with.

**Caution: Do not position and operate the pasta cooker near combustible or flammable materials or objects.**

## Fitting head unit to the body

- Place the head unit into the right and left support bracket at the rear of the pasta cooker body, then press the spring pin at the right to position the head unit into the water tank.

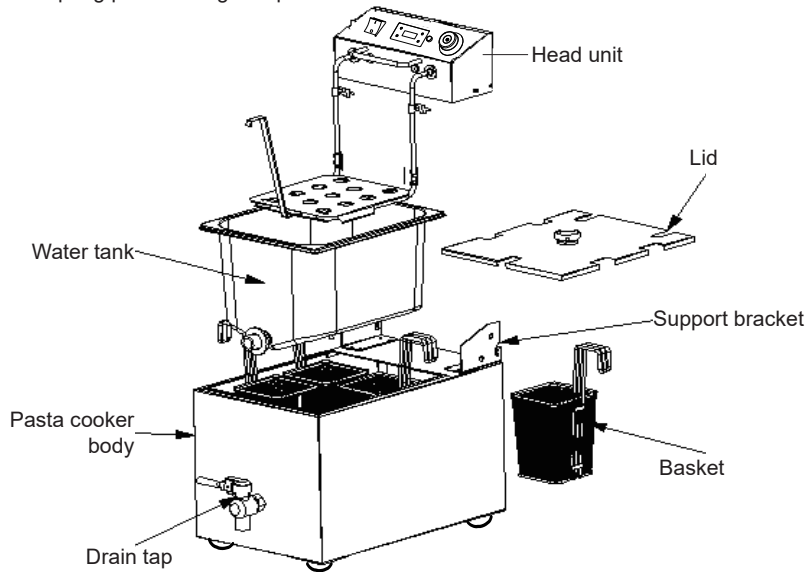


- The pasta cooker can now be filled with water.
- Connect the pasta cooker to the correct power supply and it is ready to operate.

## Operation

- Set the power switch to "I" position, then turn the thermostat to the required temperature (30°C-110°C). The HEAT indicator light will light up.
- While heating up, the indicator light will come on; when the required temperature is reached, the indicator light will go out.
- As the water temperature fluctuates, the thermostat will operate to maintain the set temperature. The indicator light will be lit when the pasta cooker is heating the water.

## Using the timer

The digital timer with audible alarm can be set from 1 second to 15 minutes. The timer provides an audible alarm after the set time expires. It provides no electrical control over the unit.

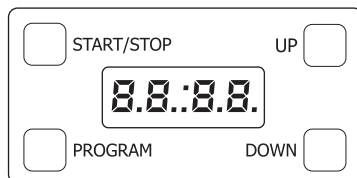

- START/STOP:** Press START/STOP to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times and the display will continue to flash until timer is reset (press the START/STOP button).
- UP:** Press UP to add extra time.
- DOWN:** Press DOWN to reduce time.
- PROGRAM:** There are a total of 6 programmable timer settings. The default factory program settings are given below.

| Program             | 1     | 2     | 3     | 4     | 5     | 6     |
|---------------------|-------|-------|-------|-------|-------|-------|
| Factory preset time | 00:30 | 01:00 | 01:30 | 02:00 | 02:30 | 03:00 |

- To change the length of a program select the program you want to change by scrolling using the PROGRAM button.
- Adjust the program time by using the UP and DOWN buttons. Press START/STOP to commence the count-down. The new program time will be automatically stored.
- If the unit is left without power for more than 24hrs the timer settings will revert to the factory defaults.

## Overheating protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power. The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

---

## Cleaning, Care & Maintenance

---

The pasta cooker should be cleaned after each day's operation; however it may require cleaning more often, depending on the volume of use.

1. Switch off the power and disconnect from the power supply by removing the plug from the socket.
2. The pasta cooker must be left to cool before cleaning.
3. Empty the water tank by opening the drain tap after use.

Warm soapy water is recommended for cleaning. Cleaning agents after prolonged use can cause damage to stainless steel.

The main body can also be cleaned with warm soapy water. Remove the head unit and element before cleaning takes place.

**The head unit cannot be immersed in water, but can be wiped down with a damp cloth.**

After cleaning as above, please use a dry cloth to clean the appliance to ensure there is no water on the heating element and in the water tank.

**Note: Use a suitable descaler and always follow the manufacturer's instructions.**

**Host recommend that this appliance is descaled every 3 months or more frequently in hard water areas.**

---

## Troubleshooting

---

A qualified technician must carry out repairs if required.

| Fault                                                        | Probable Cause                      | Solution                                                                                   |
|--------------------------------------------------------------|-------------------------------------|--------------------------------------------------------------------------------------------|
| Appliance not working                                        | The unit is not switched on         | Check unit plugged in correctly and switched on                                            |
|                                                              | Plug or lead is damaged             | Consult a qualified technician                                                             |
|                                                              | Fuse in the plug has blown          | Replace the plug fuse                                                                      |
|                                                              | Power supply                        | Check power supply                                                                         |
| Appliance does not reach set temperature                     | Faulty thermostat                   | Consult a qualified technician                                                             |
|                                                              | Faulty element                      | Consult a qualified technician                                                             |
| Appliance heats up but indicator light not ON                | Indicator light has expired         | Consult a qualified technician                                                             |
| HEAT indicator light comes on but appliance does not heat up | Faulty element                      | Clean cooking surface as instructed                                                        |
|                                                              | Faulty thermostat                   | Consult a qualified technician                                                             |
|                                                              | Thermostat set incorrectly          | Check thermostat                                                                           |
| No power                                                     | Thermal cut-out switch is activated | Check the appliance is safe with no obvious damage then press the reset switch on the rear |

---

## Service

---

Should your appliance have a fault, please visit the Service section of the HOST website:

<https://www.host-appliances.com/repairs>

---

## Technical Specifications

---

| Model      | Voltage              | Power | Water tank capacity | Dimensions (H x W x D) (mm) | Weight (kg) |
|------------|----------------------|-------|---------------------|-----------------------------|-------------|
| HOST0562PC | 220-240V~<br>50/60Hz | 2900W | 8L                  | 450 x 280 x 413             | 10.6        |

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

---

## Electrical Wiring

---

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E



This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

---

## Compliance

---

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.  
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

# HOST UKCA Declaration of Conformity



We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number      HOST0562PC      8 Litre Pasta Cooker - 2.9kw

is in conformity with the applicable requirements of the following documents

| Ref. No.            | Edition/date                                                   |
|---------------------|----------------------------------------------------------------|
| BS EN 60335-1       | 2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021 |
| BS EN 60335-2-47    | 2003 +A1:2008 +A11:2012 +A2:2019                               |
| BS EN 62233         | 2008                                                           |
| BS EN IEC 55014-1   | 2021                                                           |
| BS EN IEC 55014-2   | 2021                                                           |
| BS EN IEC 61000-3-2 | 2019 +A1:2021                                                  |
| BS EN 61000-3-3     | 2013 +A1:2019 +A2:2021                                         |

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by:

DocuSigned by:  
  
866FAAB7CD48499...

Full Name Jess Attree

Title: General Manager

Location: Chepstow, Great Britain

Date: 22<sup>nd</sup> May 2023



[www.host-appliances.com](http://www.host-appliances.com)

HOST0562PC\_EN\_A5\_v1\_2023/06/06