

HOST

Electric fryer

Instruction manual

Model:

HT106 (HOST0566FS)

HT112 (HOST0575FD)



**Read this instruction
manual carefully
before use**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Caution! Hot surface!** 
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT move or carry the appliance when it is switched on.
- **Caution!** Never switch on the deep fryer without oil inside.
- ALWAYS ensure oil levels are within the '**MIN**' and '**MAX**' levels. Failure to do so could result in fire.

- ALWAYS use a suitable cooking oil.
- ALWAYS remove excess moisture/water from food before frying to avoid excess foaming and spitting of the oil.
- Change oil regularly. The flashpoint of oil (the point at which it ignites) gradually reduces the more it is used.
- **In case of fire, never use water to extinguish. Never pour water onto hot oil or fat.** 
Use the lid to cover the fire instead.
- During and after cooking, the unit is still hot. Never touch the surface to avoid scalding.
- Suitable for indoor use only.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance must only be used in accordance with these instructions and by persons to do so.

 
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).
- **Warning: This is an attended appliance and must be supervised when in use.**
- **Switch off and unplug after use!**
- **If oil begins to smoke or overheat, switch off immediately.**

Installation

1. Place the unit on a heat-resistant surface. Avoid placing it on or close to flammable materials. Maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation.
2. Keep the unit away from splashing water and countertop's edge.

Note: Before using for the first time, clean the lid, basket, batter plate and oil tank with warm soapy water. Let dry completely.

Operation

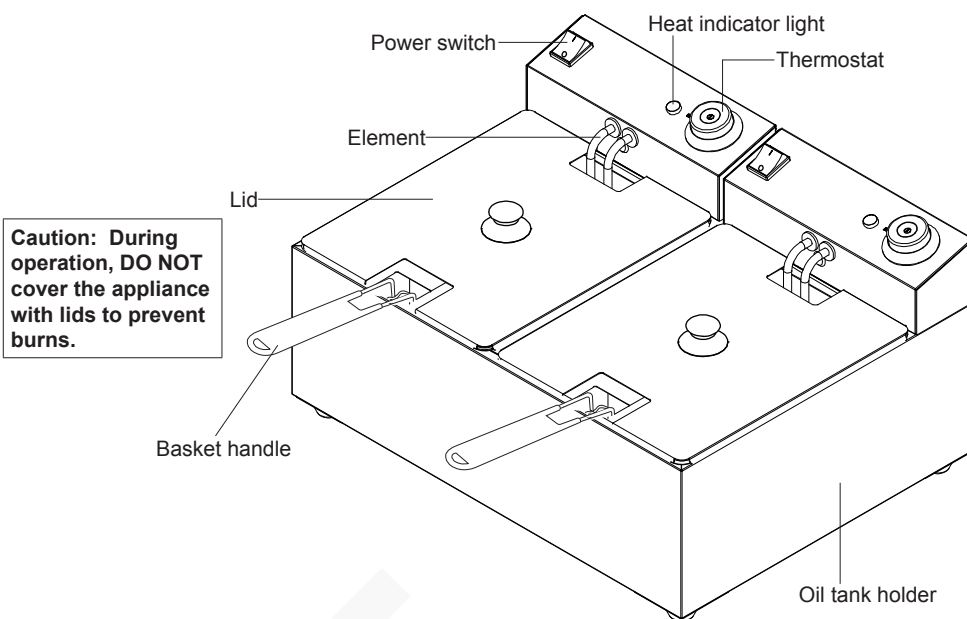


Connecting the head unit

The head unit is supplied as a single detachable part to aid in cleaning the appliance.

To connect the head unit to the main body:

 
1. Put the head unit onto the main body of the appliance, using the tabs (A) on the rear of head unit and the lugs (B) on the rear of the main body.
2. Lower the head unit onto the main body, until the bottom of head unit is flat with the surface of the body, and the safety switch (C) can touch the pin (D) on the main body.

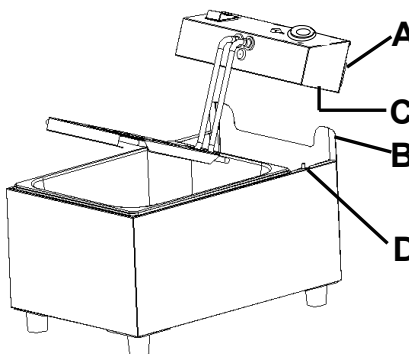

Connecting the basket handle

Care must be taken to ensure that the handle is correctly located, and securely pulled back in to position before being used.

 1. Squeeze the two ends of the handle together.
2. Slot the ends of the handle in to the basket.
3. Lower the handle so that it slots over the frame of the basket.

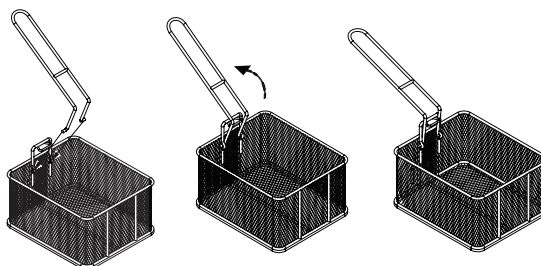

Start frying

1. Pour cooking oil into the oil tank between the MIN and MAX markings.
2. Connect the appliance to the mains power supply.
3. Set the POWER switch to I (ON position).
4. Set the thermostat to the desired temperature (50°C-190°C). The HEAT indicator light turns On, indicating the appliance begins to heat the oil.

Note: 170°C to 180°C is suitable for general cooking.

5. When the set temperature is reached, the HEAT indicator light turns Off.
6. Lower the basket with food into the oil. The HEAT indicator light turns On again.

Note: During use, the HEAT indicator light will cycle on/off, indicating the set temperature is being maintained.

7. When the food is cooked, lift the basket and hang it onto the oil tank's support. Allow the oil to drain from the frying basket for seconds.

WARNING: The food and oil are very hot! Take care when removing the basket as oil may drip.

8. After use, set the POWER switch to O (OFF position) and disconnect the appliance from power supply.

Overheat protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power.

The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

Cleaning, Care & Maintenance

- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Always allow the oil to cool before cleaning, ideally for at least 6 hours.
- Check the temperature with a suitable probe thermometer; 40°C is the MAXIMUM temperature at which oil should be removed.
- For best performance, HOST recommend that the appliance is cleaned after each day of operation.

Note: Failure to clean the appliance regularly may result in premature activation of the thermal cut-out switch.

- Remove the frying basket first, then remove the head unit for ease of cleaning.
- Empty the oil tank to clean the appliance thoroughly.

Warning: Do not remove the oil tank until AFTER it has been emptied.

- If the remaining oil is to be reused, filtering it before refilling will extend the oil's cooking life.
- Use a suitable detergent to clean the interior of the appliance.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning, ensure there is no water left in the fryer.

Clean all removable parts

- Use warm, soapy water and a soft brush to clean the lid, basket, batter plate and oil tank.
- Dry thoroughly.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Thermal cut-out switch is activated	Wait until the unit cools down. Check the appliance is safe with no obvious damage then press the reset switch on the rear
	Safety switch not located properly	Refit head unit
Appliance does not reach set temperature	Faulty thermostat	Consult a qualified technician
	Faulty element	Consult a qualified technician
	Build-up of fat on the element	Clean the appliance
Appliance heats up but indicator light does not come on	Indicator light has expired	Consult a qualified technician
HEAT indicator light comes on but appliance does not heat up	Faulty element	Consult a qualified technician
	Faulty thermostat	Consult a qualified technician
	Thermostat set incorrectly	Check thermostat
Oil overheats or starts to smoke	Thermostat damaged	Switch off immediately. Consult a qualified technician

Service

Should your appliance have a fault, please visit the Service section of the HOST website:

<https://www.host-appliances.com/repairs>

Technical Specifications

Model	Voltage	Power	Capacity	Dimensions (H x W x D) (mm)	Net Weight (kg)
HT106 (HOST0566FS)	220-240V~ 50/60Hz	2800W	5L	280 x 270 x 410	5.3
HT112 (HOST0575FD)		2 x 2800W	2 x 5L	280 x 545 x 410	9.9

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E



This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

Declaration of Conformity

We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- **Low Voltage Directive (LVD) - 2014/35/EU**
Electrical Equipment (Safety) Regulations 2016
- **Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC**
Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091)
- **Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU**
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)
- **Regulation (EC) No 1935/2004- Food Contact Materials (FCM)**
Regulation (EC) No 1935/2004 on Materials and Articles intended to Come into Contact with Food

We hereby declare that:

Equipment Model number:


HT106(HOST0566FS)	Electric Fryer Single - 3kW 5Ltr
HT112(HOST0575FD)	Electric Fryer Double - 3kW 5Ltr

is in conformity with the applicable requirements of the following documents:

Ref. No.	Edition/date
EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021
EN 60335-2-37	2002 +A1:2008 +A11:2012 +A12:2016
EN 62233	2008
EN IEC 55014-1	2021
EN IEC 55014-2	2021
EN IEC 61000-3-2	2019 +A1:2021
EN 61000-3-3	2013 +A1:2019 +A2:2021

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

 Signed by:

Signed by:

AB6DB7656FFB441...

Full Name: Ashley Hooper
Title: Group Head of Product
Quality & Compliance
Location: Bristol, United Kingdom
Date: 05TH Nov 2025





www.host-appliances.com

HT106 (HOST0566FS)_HT112 (HOST0575FD)_EN_A5_v2_2025/11/06