

HOST

Milkshake maker

Instruction manual

Model:

HOST0631MS
HOST0632MD



**Read this instruction
manual carefully
before use**


Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- This appliance is only suitable for mixing beverages. Do not use this appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Keep hands and utensils out of the mixing cup while motor is running to prevent severe personal injury and / or damage to the appliance.
- Never try to remove agitators while cup is sitting on the microswitch plate.
- Do not operate with loose or damaged agitators.
- Do not place cup on to microswitch plate with On/Off switch in the On position (I or II position).
- Please note milk may double in volume after mixing so fill the cup accordingly.
- When using the Tritan jug please use the Tritan agitators supplied. **(Note:** The Tritan jug and agitators are sold separately.)
- Do not leave appliance unattended while in use.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Operation

Model: HOST0632MD

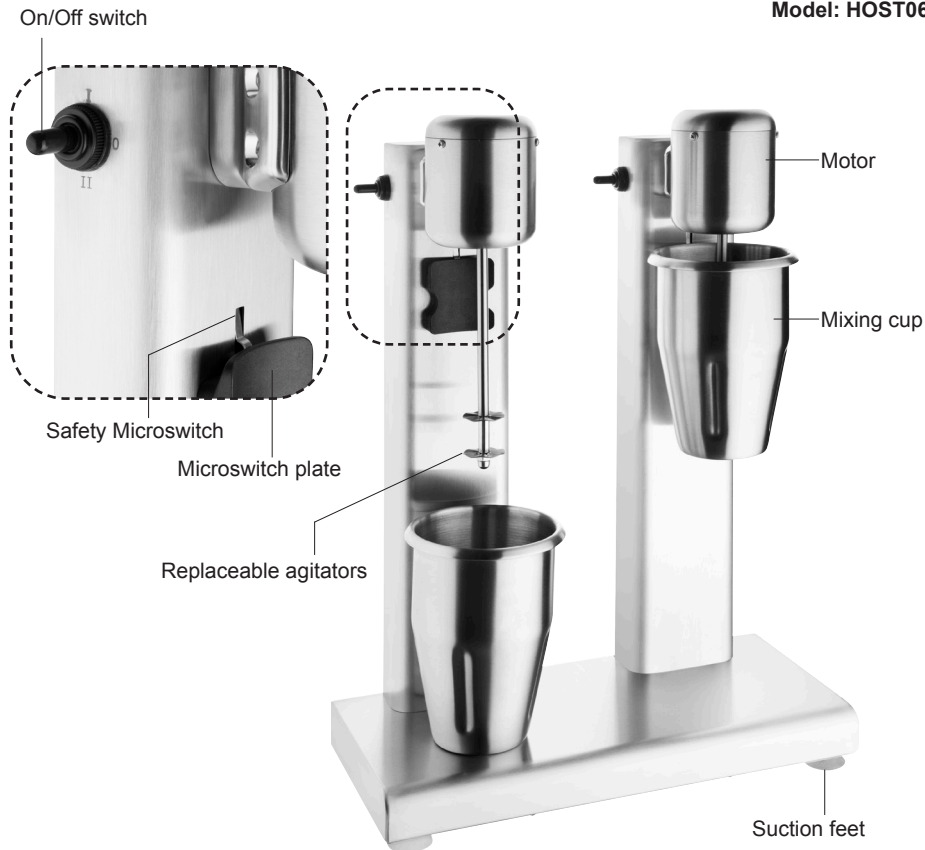

On/Off switch:

Up position for Low speed (I); Down position for high speed (II); Middle position for turning off (0).

Mixing

Before use, ensure to

- Clean all removable parts thoroughly.
- Turn off On/Off switch (0 position).

1. Plug in appliance.
2. Place ingredients into mixing cup.
3. Locate cup on to the microswitch plate.
4. Turn on appliance by setting the On/Off switch to desired speed setting.

Note:

- Do not run the appliance excessively for more than 3 minutes at a time to avoid overheating activation. In case of overheating, the appliance will stop work automatically. Let it cool down sufficiently before restart.
- With the safety microswitch, the appliance will turn off automatically once the mixing cup is released from the microswitch plate.
- Before removing cup, ensure to turn off appliance using On/Off switch and let the motor come to a complete stop.

Cleaning, Care & Maintenance

- Always disconnect from power supply before cleaning.
- Always allow to cool before cleaning.
- Let the motor come to a complete stop before removing the cup.
- The cup is NOT dishwasher proof!
- Use warm, soapy water and a damp cloth to clean the cup.
- The agitators can be removed for thorough cleaning. Or, with the agitators in place, you can run the appliance with clean water in the cup for seconds.
- Dry thoroughly after cleaning.

Warning: Do not allow any water to spill into the body of the appliance when cleaning.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Cup not located properly	Relocate cup

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Cup Capacity	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0631MS	220-240V~ 50-60Hz	80W	0.34A	750ml	510 x 170 x 170	3.45
HOST0632MD		80W+80W	0.34A	2 x 750ml	510 x 360 x 170	7

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

UK
CA

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

[illegible]

Ref. No.	Edition/date
BS EN 1672-2	2005 +A1:2009
BS EN 60204-1	2018
BS EN ISO 12100	2010
BS EN 55014-1	2017
BS EN 55014-2	2015
BS EN IEC 61000-3-2	2019
BS EN 61000-3-3	2013 +A1:2019

Signed by:

DocuSigned by:


Full Name Jess  866FAAB7CD48499...

Title: **General Manager**

Location: Chepstow, Great Britain

Date: 27th June 2022



www.host-appliances.com

HOST0631MS_HOST0632MD_EN_A5_v1_2022/08/18