

HOST

Waffle Maker

Instruction manual

Model:

HOST0684WM



Read this instruction
manual carefully
before use

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Caution! Hot surface!** 
- **During and after cooking, the unit is still hot. Never touch the surface to avoid scalding.**
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT carry when hot.
- DO NOT leave the appliance unattended during operation.
- DO NOT obstruct or cover the appliance in any way when in use.
- Not suitable for outdoor use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.

- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Always use the black handle to lift the plate.
- The appliance should never be used in the opened position.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation

1. Place the unit on a heat-resistant surface. Avoid placing it on or close to flammable materials. Maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation.
2. Keep the unit away from splashing water and countertop's edge.

Note: Before using for the first time, clean the appliance with warm soapy water. Let dry completely.

Operation


Cooking

1. Close the plates.
- **Note: It may be necessary to slightly grease the plates with cooking oil before cooking depending on the foodstuff.**
2. Connect the appliance to the mains power supply and set the power switch to "I".
3. Set the thermostat to the desired temperature (50°C-300°C). The HEAT indicator light turns on.
 - **Note: 185°C is suitable for general waffle cooking.**
4. When the set temperature is reached, the HEAT indicator light turns Off.
 - **Note: During use, the HEAT indicator light keeps on and off, indicating the set temperature is being kept.**
5. Lift the top plate and place the waffle mix on the bottom plate.
6. Lower the top plate.

Using the timer

The digital timer with audible alarm can be set from 1 second to 19 minutes and 59 seconds. The timer provides an audible alarm after the set time expires. It provides no electrical control over the unit.

- : Press to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times and the display will continue to flash until timer is reset (press the  button).
- : Press to add extra time.
- : Press to reduce time.
- : There are a total of 8 programmable timer settings by the factory before shipment as below:

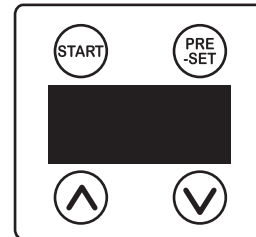

Program	1	2	3	4	5	6	7	8
Factory preset time	00:30	01:00	01:30	02:00	02:30	03:00	03:30	04:00

- To change the length of a program, select the program you want to change by scrolling using the  button.
- Adjust the program time by using the  and  buttons. Press  to commence the count-down. The new program time will be automatically stored.

After use: Set the thermostat to "MIN" and power switch to "O". Then disconnect from the power supply.

Overheating protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power.

The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this, follow the cleaning steps below:

- Always turn OFF the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning, but for best results clean the plates when they are still slightly warm.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.

WARNING: Do not use steel wool as it may leave shards that could contaminate food.

Waste Tray

- This appliance features waste trays to collect any liquid or fats that run off during cooking.
- At least once a day, remove and empty the trays before washing with warm, soapy water.

WARNING: Do not remove the trays during or immediately after use as the contents will be hot.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
Appliance not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Consult a qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
Appliance heats up but indicator light Not On	Indicator light has expired	Consult a qualified technician
HEAT indicator light comes on but appliance does not heat up	Faulty element	Consult a qualified technician
	Faulty thermostat	Consult a qualified technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface as instructed
	Faulty element	Consult a qualified technician
No power	Thermal cut-out switch is activated	Check that the appliance is safe then press the reset switch on the rear of the unit

Service

Should your appliance have a fault, please visit the Service section of the HOST website:

<https://www.host-appliances.com/repairs>

Technical Specifications

Model	Voltage	Power	Current	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0684WM	220-240V~ 50-60Hz	1600W	7A	245 x 325 x 400	10

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number **HOST0684WM** **Waffle Maker**

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021
BS EN 60335-2-38	2003 +A1:2008
BS EN 62233	2008
BS EN IEC 55014-1	2021
BS EN IEC 55014-2	2021
BS EN IEC 61000-3-2	2019 +A1:2021
BS EN 61000-3-3	2013 +A1:2019 +A2:2021

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by:

DocuSigned by:


Full Name **Jess Atwell** 866FAAB7CD48499...

Title: **General Manager**

Location: **Chepstow, Great Britain**

Date: **19th May 2023**



www.host-appliances.com

HOST0684WM_EN_A5_v1_2023/05/22