

HOST

Heated Display Merchandiser

Instruction manual

Model:

HOST0731HD



Read this instruction
manual carefully
before use

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of practice
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- **Warning! Hot surface! Always wear safety gloves when placing or removing food.**
- This product is only designed to store food temporarily. Do not use for laboratory or industrial purposes.
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs.
- DO NOT store products on top of the appliance.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation

- Remove all packaging and dispose of it safely.
- Wipe all surfaces with a clean, damp cloth before use.
- Position the Merchandiser on a level and stable surface, insert the shelves on to the shelf supports, add water to the Water Tray if humidification is required, taking care not to overfill.
- There should be at least 100mm clearance on all sides, Do not place objects on top of the Merchandiser at any time.

Operation

- Add water to the Water Tray if humidification is required, then place the Tray in position inside the Merchandiser.
- Connect the Merchandiser to electricity by inserting the plug into a socket, turn on supply at socket.
- Turn switch at the rear of the Merchandiser to the on position, this will start the heating element.
- Rotate the knob at the rear of the Merchandiser to set the temperature.
- The Merchandiser is now ready for food to be displayed and kept warm.


Cleaning, Care & Maintenance

**Always turn off and disconnect the appliance from the power supply before cleaning.
Always allow the appliance to cool before emptying or cleaning.**

- Remove any food debris that is present in the Merchandiser after use.
- Clean the internal surfaces with a cloth that is damp with soapy water, or with a food safe cleaning agent.
- Dry thoroughly after cleaning making sure that no moisture is left in the Merchandiser.

Removable crumb tray

- Periodically empty the crumb tray (located at the rear of the appliance).
- Slide the tray out to empty.
- Slot back in securely when replacing the tray.

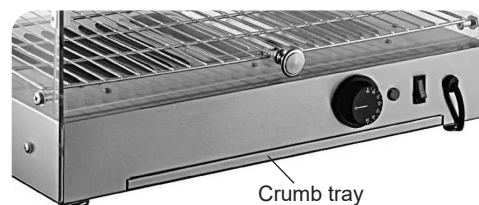

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Thermostat has failed	Consult a qualified technician
Indicator Light comes on but unit does not heat up	Heating element has failed	Consult a qualified technician
	Thermostat has failed	Consult a qualified technician

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Temperature range	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0731HD	220-240V~ 50Hz	800W	3.5A	30°C-90°C	376 x 554 x 376	14.4

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number **HOST0731HD** - 45Ltr Countertop Heated Food Display

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 + A11:2014 + A13:2017 + A1:2019 + A14:2019 + A2:2019 + A15:2021
BS EN 60335-2-49	2003 + A1:2008 + A11:2012 + A2:2019
BS EN 62233	2008
EN IEC 61000-6-3	2021
EN IEC 61000-6-1	2019

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by: 

Full Name **Jess Atkins**

Title: **General Manager**

Location: Chepstow, Great Britain

Date: **16th June 2022**



www.host-appliances.com

HOST0731HD_EN_A5_v1_2022/08/17