

HOST

Water boiler

Instruction manual

Model:

HT052 (HOST0770WA)



**Read this instruction
manual carefully
before use**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Caution! Risk of scalding! Do not touch hot surfaces.**
- Ensure the power cord never touches the hot surface.
- ONLY use drinking or potable water with this appliance.
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT place on or near hot surfaces such as a hob or radiant rings or near a naked flame.
- Suitable for indoor use only.
- Always switch off and disconnect the power supply to the appliance before cleaning or maintenance.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.



 
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation

Notes:

- The appliance should be disconnected from the power supply during installation.
- The appliance should not be left unattended for long periods of time.
- The appliance will become hot so must be placed on a suitable heat and steam resistant surface. It is not suitable for polished wood surfaces.
- Maintain a distance of 50cm between the appliance and walls or other objects for ventilation.
- We suggest installing a water filtration system in the case of a hard water supply.


1. Connect the water inlet hose (supplied) to the appliance then to the water supply.
2. Ensure the water pressure of the connected water supply is between 0.2-0.6Mpa (Flow rate $\geq$ 4L/min).
3. Ensure the water temperature of the connected water supply is between 0-40°C.
4. The use of a stop cock is recommended to isolate the unit from the water supply for servicing.

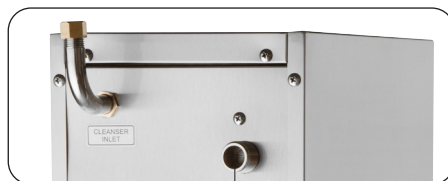

Water inlet: Attach the water inlet hose here

Note: Only use the water inlet hose supplied with the appliance. Other hoses are not suitable and should not be used.

 Control Panel

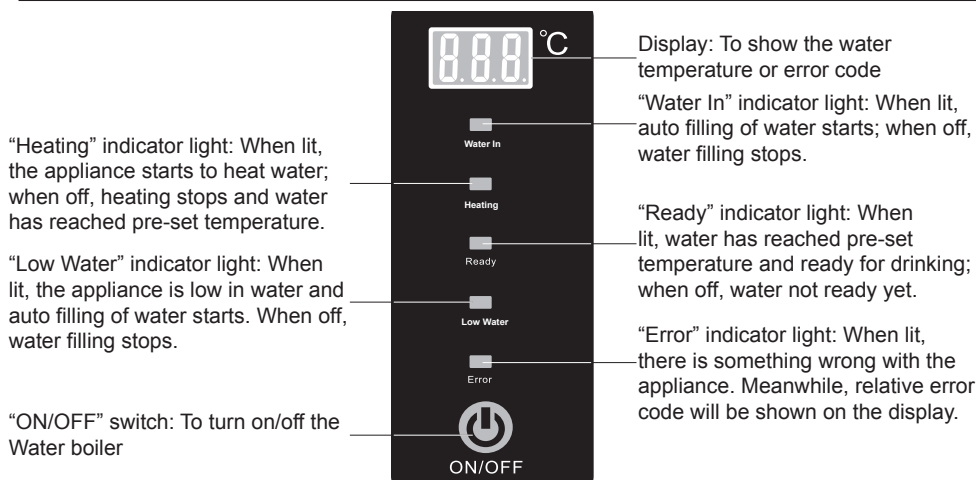

Operation

HOST recommend that the appliance is cleaned out before using for the first time, or if the appliance has been sat unused for an extended period of time.

1. Put the drip tray in place.
2. Connect to the mains power supply. The appliance is powered up at once and shows “OFF”.
3. Press the “ON/OFF” switch. The display shows the temperature first, then flashes “ELL”.
4. The “Water In” indicator light and the “Low Water” indicator light illuminate together. The appliance then starts automatic filling.
5. After filling, the “Heating” indicator light illuminates indicating the appliance starts to heat water; when the light off, heating stops indicating a rapid heating cycle has been completed.
6. When the “Ready” indicator light illuminates, the water has reached pre-set temperature and ready for drinking.
7. **Dispensing water:** Place a vessel beneath the tap and pull the tap handle towards you to begin dispensing. Raise the tap handle to close the tap.
8. Use the first 2/3 boiling cycles to test the water connection and flush out the system. Discard the hot water from these initial cycles.

NOTE: Before the boiler chamber is full, the boiler will automatically keep running the “filling-then-heating” cycle. When the “Ready” indicator light comes on and the display shows “98°C”, the water has reached the pre-set temperature and suitable for drinking.

NOTE: During operation, steam may rise from the appliance and loud bubbling noises may be heard. This is perfectly normal.

9. To turn off the appliance, press the “ON/OFF” switch for 5 seconds. The display will show “OFF”.

Cleaning, Care & Maintenance

 
Warning: Before cleaning and maintenance, always turn off the appliance, disconnect it from the power supply, and let it cool sufficiently.

- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- DO NOT use abrasive cleaners or pads.
- Dry thoroughly after cleaning.

Emptying the appliance

In case the appliance will not be used for an extended period of time, empty it thoroughly.

1. Turn off the water supply.
2. Remove the cap from the drain outlet (on the bottom) and let water flow into a suitable container.
3. Re-locate the cap in place afterwards.

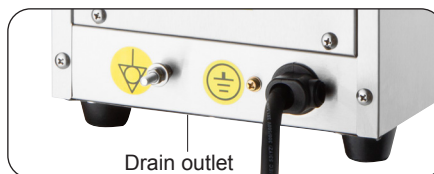

De-scaling

For the best water quality, HOST recommend that a water filter is installed to the mains water supply, particularly in hard water areas. Doing so will reduce the build up of limescale and contaminants in the water tank thus maintaining energy efficiency and prolonging the life of the appliance.

To de-scale the appliance:

1. Turn off and disconnect the unit from the power supply.
2. Remove the cleanser inlet cap. Then pour a solution of de-scaler and water into the appliance via the inlet.

Note: Always use a suitable de-scaler and follow the manufacturer's instructions on the length of time required to soak, water temperature and on how to dispose of the solution safely.



3. Drain the solution and discard safely.
4. Re-start the appliance and let it run 2 or 3 boiling cycles to flush out the system and remove any de-scaler residue. Empty the appliance afterwards.
5. The appliance is now ready for use.

IMPORTANT: Failure to de-scale or maintain will invalidate your guarantee.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
"ELL" on Display	It is normal in case of the first time filling	
	Water shortage	Check water supply is normal and water inlet hose is not blocked. If problem persists, consult a qualified technician
"Er1" on Display	Water supply	Check water supply is normal and water inlet hose is not blocked. If problem persists, consult a qualified technician
"Er2" on Display	Heating element is faulty	Consult a qualified technician
"Erd" on Display	Thermoprobe for the water readiness is faulty	Consult a qualified technician
"ErH" on Display	Thermoprobe for the water heating is faulty	Consult a qualified technician
"Er9" on Display	The appliance needs to be de-scaled	Turn off and unplug, and descale the appliance following the instructions in section "De-scaling"

Service

Should your appliance have a fault, please visit the Service section of the HOST website:

<https://www.host-appliances.com/repairs>

Technical Specifications

Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Voltage	Power	Current	Capacity	Max. Water output	Dimensions (H x W x D) (mm)	Net Weight
HT052 (HOST0770WA)	220-240V~ 50/60Hz	2500W	12A	8L	35L/hour	540 x 185 x 405	5.7kg

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.



Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Low Voltage Directive (LVD) - 2014/35/EU
Electrical Equipment (Safety) Regulations 2016
- Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC
Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091)
- Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)
- Regulation (EC) No 1935/2004- Food Contact Materials (FCM)
Regulation (EC) No 1935/2004 on Materials and Articles intended to Come into Contact with Food

We hereby declare that:
Equipment Model number:


HT052 (HOST0770WA) Water Boiler - 8Ltr

is in conformity with the applicable requirements of the following documents:

Ref. No.	Edition/date
EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A2:2019 +A14:2019 + A15: 2021 + A16: 2023
EN IEC 60335-2-75	2023 + A1: 2023 + A2: 2023 + A11: 2023
EN 62233	2008
EN IEC 55014-1	2021
EN IEC 55014-2	2021
EN IEC 61000-3-2	2019 +A1:2021
EN 61000-3-3	2013 +A1:2019 + A2: 2021

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

 Signed by:

Signed by:

AB6DB7656FFB441...

Full Name Ashley Hooper
Title: Group Head of Product
 Quality & Compliance
Location: Bristol, United Kingdom
Date: 21TH Oct 2025





www.host-appliances.com

HOST0770WA_EN_A5_v3_2025/11/18