

# HOST

## Water Boiler

Instruction manual

### Model:

HOST0775WM  
HOST0776WM



Read this instruction  
manual carefully  
before use

---

## Safety Instructions

---

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- Ensure the location for the appliance can support its weight when full.
- DO NOT fill the appliance above the 'MAX' level.
- DO NOT immerse the appliance in water.
- DO NOT leave the machine unattended during operation.
- DO NOT operate this appliance when less than one third full.
- **DO NOT touch the outer surfaces of the appliance. They become hot during use.**
- Suitable for indoor use only.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- Please ensure that the tap is screwed fully on before use.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.




- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

## Operation

1. Remove the appliance from the packaging. Make sure that all protective plastic film and plastic coatings are thoroughly removed from all surfaces.

**Note:** Before using for the first time, clean the interior of the appliance and all parts in warm soapy water, then rinse thoroughly.

2. Ensure the Temperature Control knob is set to 'OFF'.
3. Remove the lid and fill the appliance to at least half of its capacity.
4. Replace the lid.
5. Connect to the mains power supply.
6. Set the Temperature Control knob to the required temperature setting. The 'BOIL' indicator light illuminates and the appliance begins to heat water.

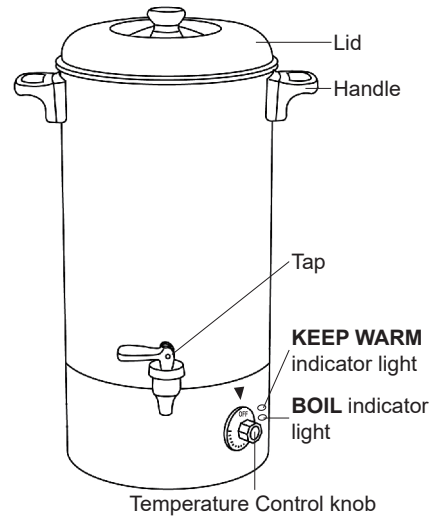

**WARNING:** Reduce the set temperature if the water begins to boil. DO NOT allow the water to boil constantly.

7. When the water has reached the set temperature the 'BOIL' Indicator light turns off and the 'KEEP WARM' indicator light illuminates.

**Note:** Once the water temperature drops 5-10°C then the appliance will reheat the water.

**WARNING:** If the Temperature Control Knob is set to or close to 'HIGH' then the appliance will constantly heat the water until knob is turned to 'OFF' or the temperature is reduced.

### Thermal Cut-Out Reset

This appliance is fitted with a Thermal Cut-Out safety feature. Should the temperature exceed safe levels the appliance will automatically cut power.

The Safety Cut-out switch is located on the underside of the appliance. To reset the appliance:

1. Empty the appliance and allow to cool.
2. Press the reset button until it clicks.

**WARNING:** Ensure the appliance has cooled down and is empty before resetting the switch, as it may need to be tipped slightly to gain access to the switch.

3. The appliance is now reset and can be used as normal.

## Serving



## Emptying the Appliance

Drain the appliance by using the tap to empty.

---

## Cleaning, Care & Maintenance

---

- **Always turn off and disconnect the appliance from the power supply before cleaning.**
- Use soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.

### De-scaling

For the best water quality, HOST recommend that a water filter is installed to the mains water supply, particularly in hard water areas. Doing so will reduce the build up of limescale and contaminants in the water tank thus maintaining energy efficiency and prolonging the life of the appliance.

To de-scale the appliance:

1. Pour a solution of de-scaler and water into the appliance.
2. Brush the interior gently with a soft bristled brush.
3. Discard the solution collected in the jug.
4. Fill the appliance with clean water and turn back On to flush out the system. Flush out the system thoroughly to remove any de-scaler residue.
5. The appliance is now ready for use.

**Note:** Use a suitable de-scaler and always follow the instructions on the container.

**HOST recommend that this appliance is de-scaled every 3 months or more often in hard water areas.**

**IMPORTANT:** Failure to de-scale or maintain will invalidate your guarantee.

---

## Troubleshooting

---

A qualified technician must carry out repairs if required.

| Fault                                                     | Probable Cause              | Solution                                               |
|-----------------------------------------------------------|-----------------------------|--------------------------------------------------------|
| The unit is not working                                   | The unit is not switched on | Check the unit is plugged in correctly and switched on |
|                                                           | Plug or lead is damaged     | Replace plug or lead                                   |
|                                                           | Fuse in the plug has blown  | Replace the fuse                                       |
|                                                           | Mains power supply fault    | Check mains power supply                               |
|                                                           | Thermal fuse has activated  | Reset Thermal fuse (see page 3)                        |
| Power light comes on but water does not reach temperature | Thermostat fault            | Consult a qualified technician                         |
| The tap is leaking                                        | The tap has become loose    | Tighten the tap handle                                 |

---

## Service

---

Should your appliance have a fault, please visit the Service section of the HOST website.

---

## Technical Specifications

---

| Model      | Voltage       | Power      | Current | Capacity (litres) | Weight (full) (kg) | Heating Time (Max. Temp. when full) | Dimensions (H x W x D) (mm) |
|------------|---------------|------------|---------|-------------------|--------------------|-------------------------------------|-----------------------------|
| HOST0775WM | 230-240V~50Hz | 2380-2600W | 11.3A   | 30                | 34.92              | 60 minutes                          | 519 x 422 x 439             |
| HOST0776WM | 230-240V~50Hz | 2380-2600W | 11.3A   | 40                | 45.41              | 89 minutes                          | 630 x 422 x 439             |

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

---

## Electrical Wiring

---

The appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

The appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

---

## Compliance

---

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.  
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

UK  
CA

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

|                        |            |                                                |
|------------------------|------------|------------------------------------------------|
| Equipment Model number | HOST0775WM | 30Ltr Stainless Steel Manual Fill Water Boiler |
|                        | HOST0776WM | 40Ltr Stainless Steel Manual Fill Water Boiler |

| Ref. No.            | Edition/date                                         |
|---------------------|------------------------------------------------------|
| BS EN 60335-1       | 2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 |
| BS EN 60335-2-75    | 2004 +A1:2005 +A11:2006 +A2:2008 +A12:2010           |
| BS EN 62233         | 2008                                                 |
| BS EN 55014-1       | 2017 +A11:2020                                       |
| BS EN 55014-2       | 2015                                                 |
| BS EN IEC 61000-3-2 | 2019                                                 |
| BS EN 61000-3-3     | 2013 +A1:2019                                        |

Signed by:  DocuSigned by:

Full Name: **Jess Attree**  
 Title: **General Manager**  
 Location: **Chepstow, Great Britain**  
 Date: **20<sup>th</sup> June 2022**



[www.host-appliances.com](http://www.host-appliances.com)

HOST0775WM\_HOST0776WM\_EN\_A5\_v1\_2022/09/07