

HOST

Meat Slicer

Instruction manual

Model:

HOST0851MS
HOST0853MS



**Read this instruction
manual carefully
before use**

Safety Instructions

THE MEAT SLICER IS A DANGEROUS APPLIANCE AND MUST ONLY BE USED BY TRAINED PERSONNEL IN ACCORDANCE WITH THESE INSTRUCTIONS

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- Always stand BEHIND the safety guard when operating the appliance.
- DO NOT place hands near the blade when in use. This can result in severe injury.
- DO NOT touch the blade edge.
- DO NOT remove food from the appliance until the blade has come to a complete stop.
- DO NOT immerse the appliance in water.
- DO NOT attempt to cut bones or items that have been frozen below -6°C. This can damage the blade.
- Always switch off and disconnect the power supply to the appliance when not in use.
- NEVER leave the appliance unattended when in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.


- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Assembly

The plastic safety guard has been removed from the appliance to prevent damage during transit.

WARNING: The safety guard MUST be fitted before using this appliance.


HOST accept no responsibility for any injury caused by operation of this appliance without the guard installed or correctly fitted.

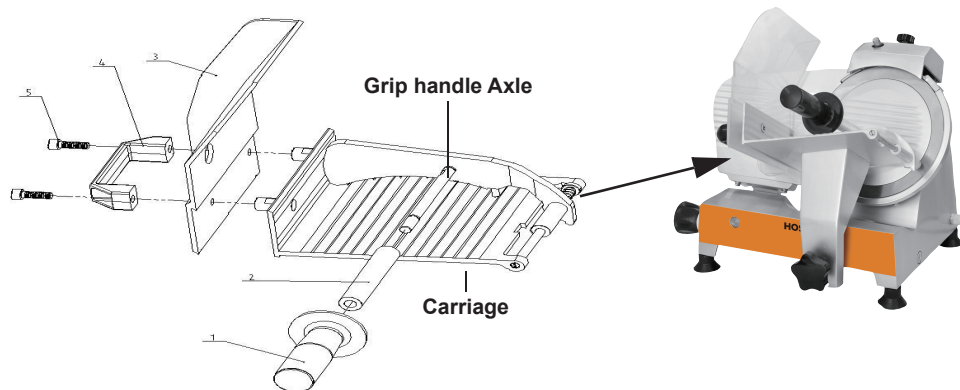

1. Fit grip handle support tube (2) over grip handle axle. Fit grip handle (1) to support tube.
2. Fit Blade guard (3) and Carriage handle (4) to carriage using screws (5) and allen key supplied.

Operation

1. Connect the appliance to the power supply
2. Set the thickness to the desired level by turning the Thickness knob anti-clockwise.
3. Place the meat in the cradle and secure in place with the Grip handle.
4. Switch On the power [I].

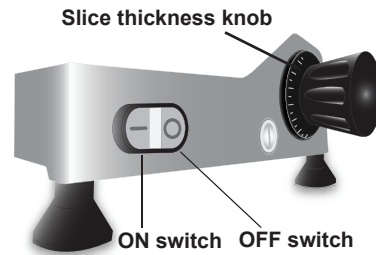

WARNING: NEVER use your hands to secure the meat when slicing.

5. Holding the carriage and grip handles, push the carriage backwards and forwards across the blade.

WARNING: The blade starts immediately.

6. After slicing the desired amount press the Off [O] button to turn Off the appliance.

WARNING: The blade continues to turn for a few seconds after switching off.

7. Remove the sliced food from the catchment area.


Note: Always disconnect the meat slicer from the mains powers supply when not in use.

Cleaning, Care & Maintenance

- Always turn off and disconnect the appliance from the power supply before cleaning.
- Always use extreme care when handling the blade.
- Use soapy water and a damp cloth to clean the appliance.
- Clean the appliance regularly.

Cleaning the Blade and Cover


1. Disconnect the appliance from the power supply.
2. Push the carriage away from the blade.
3. Unscrew the blade cover release bolt.

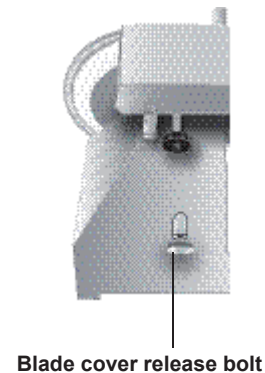

Note: The appliance will not work with the blade cover release bolt unscrewed.

4. Carefully lift off the blade cover
5. Attach the blade removal tool by placing it over the blade and screwing the two bolts into the corresponding holes in the blade.

6. Unscrew the 3 screws holding the blade, leaving it sat on the slicer.
7. Lift the blade off the slicer using the knobs of the blade removal tool as handles.
8. Wash the blade by wiping from the centre towards the edge. Keep the removal tool in place when cleaning.
If necessary, wipe clean the face of the blade once it has been reattached.
9. Dry thoroughly.
10. Replace the blade and cover, ensuring the blade securing bolt is securely tightened.

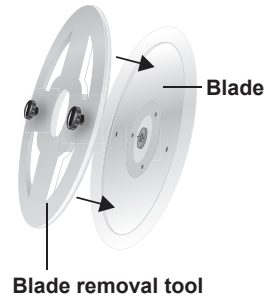

Note: HOST recommend the use of cut-resistant or wire mesh gloves when cleaning the blade.


Sharpening the Blade

**Note: Always clean the edge of the blade before sharpening.
Always wear protective eye wear when sharpening the blade.**


If the meat slicer begins to produce uneven or broken slices, it may be blunt and require sharpening.

To sharpen the blade:

1. Unscrew the Sharpener release bolt and lift off the blade sharpener.
2. Rotate the sharpener 180° and insert it back into the appliance.
3. Tighten the Sharpener release bolt to secure the sharpener.
4. Start the appliance.
5. Press and hold down the rear sharpening stone button to sharpen the blade. Do not exceed one minute of constant sharpening.
6. Release the rear stone and press down the front sharpening stone button for a few seconds to smooth the edge of the blade.
7. Turn off the appliance and return the sharpener to its original position, ensuring it is securely tightened.

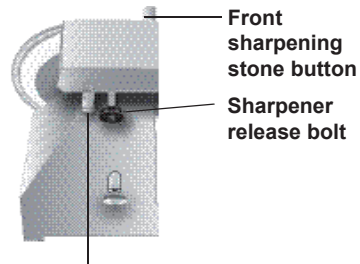


Rear sharpening stone button

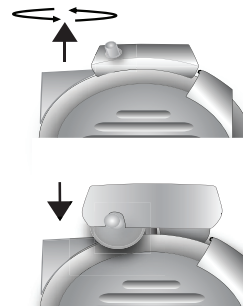

Lubricating the Pusher Axle

1. Push the carriage to one side and clean the axle with a dry cloth.
2. Lubricate the axle surface with grease suitable for use in food preparation areas.
3. Push the carriage backwards and forwards several times to distribute the grease evenly.

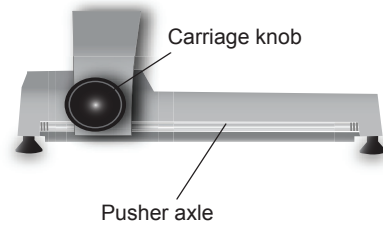

Note: Ensure you use a grease that is suitable for use in a food preparation area.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Blade cover securing screw is not properly inserted	Remove plate securing screw and screw back in
The cradle hits the blade guard	The carriage has been improperly fitted	Unscrew the carriage knob, check the carriage is properly in place then replace the carriage knob
The blade is not cutting properly/accurately	Blade is blunt	Sharpen the blade

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Slicing Thickness	Blade Diameter	Max. Slicing Width	Dimensions (W x D x H) (mm)	Weight (kg)
HOST0851MS	220-240V 50/60Hz	120W	0.9A	0-12.5 mm	220mm	120 X 150 mm	445 x 457 x 445	17
HOST0853MS	220-240V 50/60Hz	180W	1.2A	0-12.5 mm	300mm	120 X 170 mm	500 x 585 x 450	26

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

The appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

The appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

UK
CA

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

[illegible]

Ref. No.	Edition/date
BS EN 60335-1	2012 +A11:2014 +A13:2017
BS EN 60335-2-64	2000 +A1:2002
BS EN 62233	2008
BS EN 55014-1	2017
BS EN 55014-2	2015
BS EN 61000-3-2	2014
BS EN 61000-3-3	2013

Signed by: DocuSigned by:

Signed by:

Full Name **Jess Attree** 866FAAB7CD48499...

Title: **General Manager**

Location: Chepstow, Great Britain

Date: 16th June 2022



www.host-appliances.com

HOST0851MS_HOST0853MS_EN_A5_v1_2022/08/12