

HOST

Sous Vide Water Bath

Instruction manual

Model:

HOST0982SV



**Read this instruction
manual carefully
before use**

Safety Instructions


- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water above the **MAX** Fill line, or use jet/pressure washers to clean the appliance.
- Do not immerse the appliance below the **MIN** Fill line.
- Do not use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- DO NOT use if damaged.
- **DO NOT touch the outer surfaces of the appliance. They become hot during use.**



- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Function

LCD Display

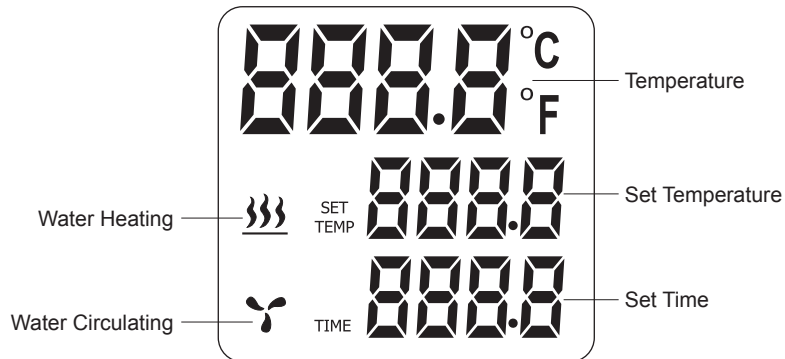

Water Heating: When displayed, water is being heated

Water Circulating: When displayed, water is being stirred

Temperature: Displays actual temperature of water

Set Temperature: Temperature set point

Set Time: In setting mode displays the time set point. In working mode displays the time left.

Operation

1. Add water to the water bath.

Note: the water level (after the food is put in) should be higher than the MIN but lower than the MAX markings on the machine.

2. Turn on by pressing the On/Off button at the back of the machine.
3. Press the Temperature Display button  to set the unit to display °C or °F.

Note: Default setting is °C. After choosing °C or °F, the appliance will remember your setting for future use.

4. Press  **TIME**  and  **TEMP**  to set working time and temperature.
5. After setting time and temperature, press  to start the unit heating. Pressing  will stop the unit heating.

Note: The appliance is designed to hold temperature with lid on. It will not hold temperature without lid.

6. When the water reaches the desired temperature place the food to be cooked into the water bath.

Note: Before Sous Vide cooking, the food should be vacuum packed first.

7. When set time has expired the Sous Vide will beep. Press  to stop the appliance heating.

Note: The appliance will go on beeping every 20 seconds. If there is no action by the operator the water temperature will be held at the pre-set temperature.

Cleaning, Care & Maintenance

- Switch off and disconnect from the power supply before cleaning.
- Allow to cool before wiping exterior surfaces and removing any loose debris.
- Empty the main body before cleaning.
- Remove the lid, rack and base plate. Clean the parts with warm soapy water.

Maintenance

- Ensure to locate the unit on a flat surface after cleaning.
- During cleaning, do not damage the interior components. Should any damage occur, consult a qualified technician. Do not attempt any unauthorized repairs to avoid accidents.
- Always use fresh water. If the water is reused many times, mineral substances may adhere to the surface of the components, thus influence the appliance's performance.

De-scaling

Why...	Normally tap-water contains minerals. When water is heated to a certain temperature, there will be scales accumulated on the heater or surface of the appliance, which will affect its performance and contaminate the outlook as well.
When...	We suggest cleaning the machine after every 20 times of use, or when accumulated working time amounts to 100 hours or less. Or you can clean your appliance at different intervals as water quality varies in different places.
Preparation	Food grade vinegar (e.g. white vinegar)
How...	1. Add water into the water bath up to the MAX marking. Then add 5g vinegar. CAUTION: Should any vinegar splash onto your eyes, rinse immediately with fresh water and turn to a doctor if needed! 2. Turn on the machine and set the working temperature to 80°C and working time to 3 hours (03:00). Now press  to start cleaning. After 3 hours, the machine will beep then turn off automatically. 3. Dispose of the solution of water and vinegar properly. Do not use the same solution for a second time. If the results are not satisfactory, repeat the above operations. 4. Clean the unit with fresh water thoroughly, then dry and store in a well-ventilated place. Note: Make sure to clean the water filters (located on the inner wall) well. The filters can be screwed off for thorough cleaning.
IMPORTANT: Failure to descale or maintain will invalidate your guarantee.	

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
No power	Auto re-set activated	This product is fitted with a thermal protector. Allow unit to cool for 30-45 minutes
Slow to Heat	Unit needs descaling	Descal the appliance
Error code E01 is displayed	Water level is too low	Add water, making sure the water level is between the MIN and MAX line
Error code E02 is displayed	Set temperature cannot be reached	Ensure the lid is in place, water filters are not stuck, and fresh cool water is used. If the error code still persists, consult a qualified technician
LCD Display does not switch on	Power switch is set to OFF	Set the power switch to ON

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0982SV	220-240V~ 50Hz	620W	2.8A	280 x 415 x 260	7.5

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.



Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- Ecodesign for Energy-related Products Regulations 2010 (as amended)

We hereby declare that:

Equipment Model number HOST0982SV 12.5Ltr Sous Vide Water Bath

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019
BS EN 60335-2-15	2016 +A11:2018
BS EN 62233	2008
BS EN 55014-1	2017 +A11:2020
BS EN 55014-2	2015
BS EN IEC 61000-3-2	2019
BS EN 61000-3-3	2013 +A1:2019

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by:

 DocuSigned by:
956FAAB7CD48495...

Full Name Jess Attree

Title: General Manager

Location: Chepstow, Great Britain

Date: 21st June 2022



www.host-appliances.com

HOST0982SV_EN_A5_v1_2022/08/17