

HOST


Conveyor Toaster Instruction manual

Model:
HOST0599CT



**Read this instruction
manual carefully
before use**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Caution! Hot surface!** Do not touch! Take care when using or handling the appliance. 
- **Fire hazard! Bread can burn!** The appliance should not come into contact or be covered with easily flammable materials, like curtains, textiles, walls and the like. Always ensure sufficient safety distance to flammable materials.
- DO NOT toast bread slices containing too much sugar with this appliance.
- DO NOT insert any metallic objects into the appliance when connected to a power supply.
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT leave the appliance unattended during operation.
- DO NOT obstruct or cover the appliance in any way when in use.
- Not suitable for outdoor use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.

- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation


1. Place the unit on a heat-resistant surface. Avoid placing it on or close to flammable materials. Maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation.
2. Keep the unit away from splashing water and countertop's edge.

Note: Before using for the first time, clean the parts that will come into contact with food with warm soapy water. Let dry completely and ensure no water goes into the appliance inside.

This appliance is intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.

Fit the Feeder rack

1. Squeeze the arms of the feeder rack then slot into the mounting holes.
2. Rest the legs on the outside of the appliance.

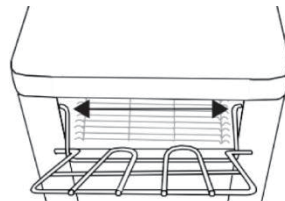

Note: This toaster can be set to discharge the toast from the front or rear of the appliance. This is known as 'Return' or 'Pass-through' operation to best suit the kitchen environment.

Return Operation

To set-up the toaster for return operation:


1. Remove the back door of the appliance.
2. Slide the return chute under the bottom of the appliance and secure its rear end to the two pins located on the side walls.
3. Re-locate the back door and fix it in the vertical position.

Pass-through Operation

To set-up the toaster for pass-through operation:

1. Lower the back door of the appliance.
2. Fix it inside the appliance by resting its curved lip on the two pins at the end of the belt.
3. Attach the Pass-through chute to the hanging screws at the rear of the appliance.

Operation

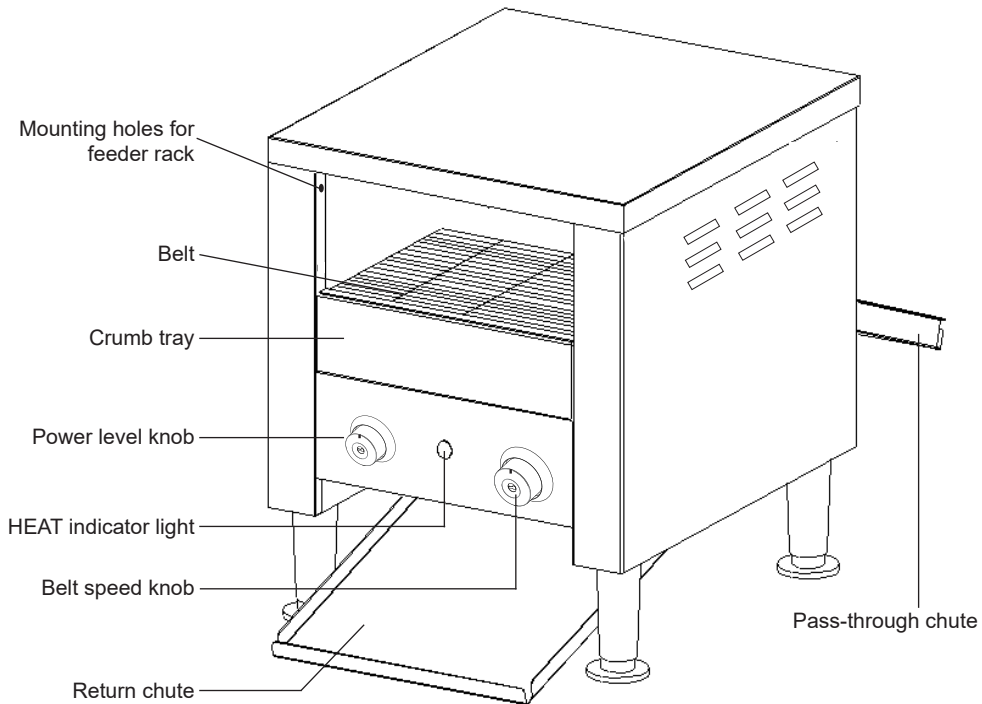

Toasting

The appliance has 3 power levels:

BREAD	Full power to both upper and lower elements
BUNS	Full power to upper element only
STBY	Energy Saver (reduces power to minimum, providing quick heat up times when required)

The speed of the conveyor belt can also be altered to adjust the cooking level.

- Turn the belt speed knob anti-clockwise towards **LIGHT** (increases the speed of the belt) for a lighter toasting.
- Turn the belt speed knob clockwise towards **DARK** (slows the speed of the belt) for a darker toasting.

To toast:

1. Connect the appliance to the power supply.
2. Set the power level and belt speed.

Note: Host recommend pre-heating the appliance for about 10-12 minutes before use.

3. Place the bread on the Feeder rack.
4. The bread is toasted as it travels through the appliance.
5. If necessary, adjust the power level / belt speed to achieve the desired level of toasting.
6. **After use:** Turn the power level knob to "OFF" and disconnect from power supply.

Cleaning, Care & Maintenance

- **Always turn Off the appliance and disconnect from the power supply before cleaning.**
- **Allow the appliance to cool before cleaning.**
- Rinse the 2 chutes and wipe dry.
- Regularly remove and empty the crumb tray.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
Appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
Appliance does not reach set temperature	Faulty power level knob	Consult a qualified technician
	Faulty element	Consult a qualified technician
Appliance heats up but indicator light does not come on	Indicator light has expired	Consult a qualified technician
HEAT indicator light comes on but appliance does not heat up	Faulty element	Consult a qualified technician
	Faulty power level knob	Consult a qualified technician
	Power level knob set incorrectly	Check power level knob setting
Appliance slow to heat up	Faulty element	Consult a qualified technician
Belt does not move / is slower than usual	Loose chain	Consult a qualified technician
Uneven toasting	Incorrect power setting	Check power setting
	Not yet up to temperature	Allow appliance to heat up

Service

Should your appliance have a fault, please visit the Service section of the HOST website:

<https://www.host-appliances.com/repairs>

Technical Specifications

Model	Voltage	Power	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0599CT	220-240V~ 50/60Hz	2600W	465 x 370 x 425	20.7

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E



This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
-

We hereby declare that: Double Slice Conveyor Toaster
Equipment Model number **HOST0599CT**

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021
BS EN 60335-2-48	2003 +A1:2008 +A11:2012 +A2:2019
BS EN 62233	2008
BS EN IEC 55014-1	2021
BS EN IEC 55014-2	2021
BS EN IEC 61000-3-2	2019 +A1:2021
BS EN 61000-3-3	2013 +A1:2019 +A2:2021

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by: 



Full Name **Jess Attree**

Title: **General Manager**

Location: **Chepstow, Great Britain**

Date: **22nd May 2023**



www.host-appliances.com

HOST0599CT_EN_A5_v1_2023/06/07