

HOST

Ice Crusher
Instruction manual

Model:
HOST0644IC



**Read this instruction
manual carefully
before use**

Safety Instructions

The machine is intended for commercial and indoor use by trained and skilled personnel familiar with these instructions.

Never bypass the safety interlocks on the appliance.

Blades are sharp - handle with care !

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- This appliance is only used for crushing ice. Do not use the appliance for anything other than its intended use.
- Switch off and disconnect from power supply when not in use, before assembling or disassembling, and before cleaning.
- Avoid contacting moving parts. Never place fingers or other utensils into feeding or discharge areas.
- Ensure to check ice chute for the presence of foreign objects before use. Use original attachments only to prevent any damage.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

- This appliance must not be used by children under any circumstances.
- ALWAYS keep hands, hair and clothing away from the moving parts.
- NEVER leave the appliance unattended when in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation

1. Remove the appliance from the packaging. Make sure that all protective plastic film and plastic coatings are thoroughly removed from all surfaces.
2. Place the appliance on a flat surface, ensuring the suction feet on the bottom get a firm grip.

Before first use

1. Open the lid and wipe it clean.
2. Put a container beneath the spout, then pour warm water through the ice jar to rinse the system thoroughly.
3. Empty the container and put it beneath the spout to collect ice cubes.

Operation

1. Drop ice cubes into the ice chute. (**Note:** Suitable for cubes up to 2x2x2 cm)
2. Close the lid in place.
3. Connect to the mains power supply and press the power switch to start.

Warning: The blades of the crusher are self feeding! Do not attempt to push cubes into blades with hand or instrument.

Note: With the safety microswitch, the appliance will stop automatically once the lid is opened during operation.


4. After use, press the power switch again to turn Off. Then disconnect from power supply.

Ice blockage

1. Should a large cube get blocked in the crushing unit, press the power switch to turn Off. Then unplug the unit.
2. Pour warm water through the ice jar to melt ice blockage.
3. Re-plug and re-start the appliance.

Cleaning, Care & Maintenance

- **Always turn off and disconnect the appliance from the power supply before cleaning.**
- Pour warm water through the ice jar to rinse the system thoroughly.
- Wipe the appliance housing with a damp cloth. Dry well afterwards.

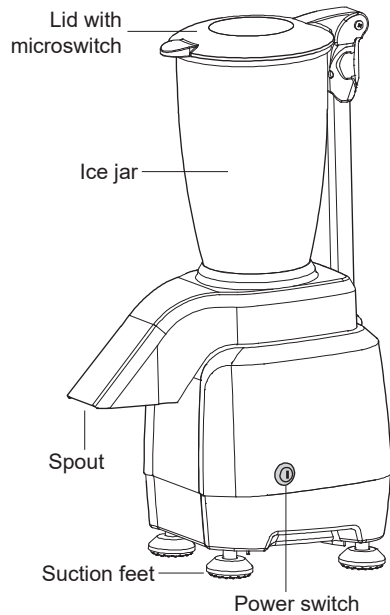

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Overheating protection is activated after a long period of intensive use	Wait at least 30 minutes and try again. Placing the appliance in a cool place will reduce the waiting time

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Max. Ice crushing capacity	Ice container capacity	Net Weight (kg)	Dimensions (H x W x D) (mm)	Largest ice cube
HOST0644IC	220-240V~ 50-60Hz	200W	0.87A	90kg/hour	3L	5.4	533 x 329 x 197	2 x 2 x 2 cm

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST. Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number **HOST0644IC** **Commercial Ice Crusher**

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60204-1	2018
BS EN ISO 12100	2010
BS EN 55014-1	2017 +A11:2020
BS EN 55014-2	2015
BS EN IEC 61000-3-2	2019
BS EN 61000-3-3	2013 +A1:2019

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by: 

Full Name **Jess Attree**

Title: **General Manager**

Location: **Chepstow, Great Britain**

Date: **21st June 2022**



www.host-appliances.com

HOST0644IC_EN_A5_v1_2022/08/09