
























Machine	Explode	Code	Description
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	1	AL124	Rubber Feet (set 4)
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	2		Base Plate
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	4	AW364	Power Board
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	5		Right-Angle Two Way Connector
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	6	AL120	Tee Connector
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	7	AS689	Pump Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	8	AP675	Alien Tee
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	9	AP674	Tee Connector
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	38	AP672	Outlet Valve
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	39	AP676	Inlet Valve
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	8-9,38-39	AS690	Valve Assembly Kit incl. Wire & Terminal
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	10	AW932	Vacuum Cover Fixing Buckle
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	11		Socket
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	12		Apuro Membrane Switch
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	13	AW336	Control Panel
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	14	AS692	CPU Circuit Board
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	15	AW730	LED Circuit Board
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	16		Stainless Steel Housing
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	17	AS693	Seal Bar Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	18	AS694	Heat-Sealing Foam
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	19		Heat Seal Gasket Fixing Block
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	20		Vacuum Lid
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	21		Aluminium Bar
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	22	AW829	Seal Ring
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	24		Stud Hole Plug
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	26		Bag Mouth Support Block
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	27		Vacuum Chamber
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	28		Rear Cover
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	29	AS695	Right Tumbler Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	30		Sliding Washer
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	32	AT162	Exhaust Joint Sealing Gasket
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	34	AS696	Left Tumbler Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	35		Fan
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	36	AS697	Press Plate of Micro Switch
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	37	AS698	Up-Down Piston Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	40		Silencer Bracket
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	41		Suction Connector B
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	42		Silicone Tube
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	43	AS699	Micro Switch Assembly
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	44		Fixing Panel
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	45	AE934	Magnetic Valve
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	46		Ø8.4 Cord Holder

Machine	Explode	Code	Description
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	47		Suction Nozzle Seal Gasket
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	48		Suction Nozzle Connector
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	49		Suction Connector Of Vacuum Chamber
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	50		Ø5 Flat Gasket
Apuro Chamber Vacuum Pack Machine - 6.8Ltr	N/A		AUS Power Cord

Circuit Diagram

