

HOST

15 litre Coffee Percolator/Urn

Instruction manual

Model:

HOST0664CP



**Read this instruction
manual carefully
before use**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- Ensure the location for the appliance can support its weight when full.
- DO NOT open the lid when the appliance is making coffee. Hot water may splash out.
- DO NOT immerse the appliance in water.
- DO NOT leave the machine unattended during operation.
- DO NOT touch the outer surfaces of the appliance. They become hot during use.
- Suitable for indoor use only.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Operation



Remove the appliance from the packaging. Make sure that all protective plastic film and plastic coatings are thoroughly removed from all surfaces.

Note: Before using for the first time, clean the interior of the appliance and all parts in warm soapy water, then rinse thoroughly.

Brewing Coffee

1. Pour fresh cold water into the urn; Use the level indicator on the front of the appliance as a guide. Do not exceed the 'MAX' mark.
2. Insert the Percolator tube into the urn.

Note: Ensure the base of the Percolator tube is securely located into the base of the urn.

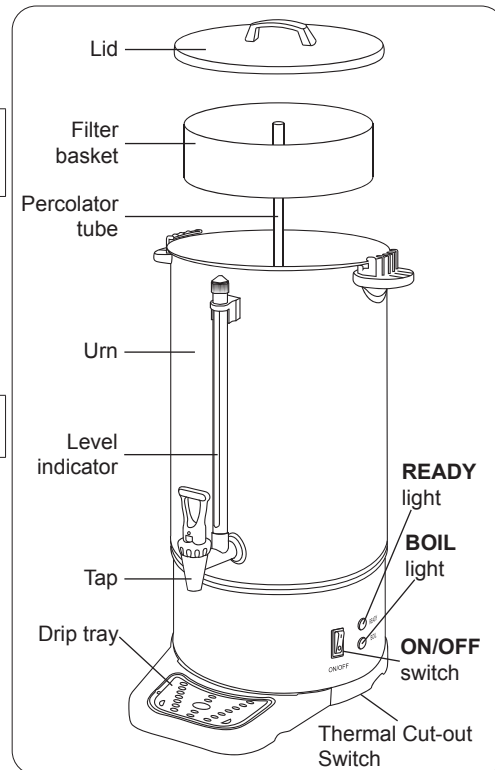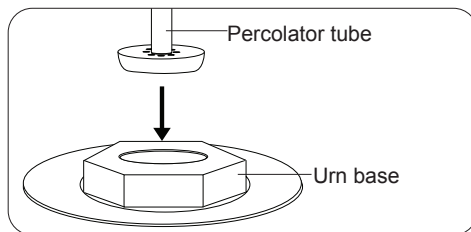

Note: The percolator base is not a separate part. The illustration as above is just an exploded view showing the connection between the urn base and the percolator tube.

3. Slot the Filter basket over the Percolator tube. Fill the Filter basket with the desired amount of ground coffee.
4. Place the lid on the Coffee Percolator. Twist to lock.
5. Connect to the power supply. Set the **ON/OFF** switch to **I** (ON position) to begin brewing the coffee. The 'BOIL' light illuminates.

WARNING: The lid of the appliance becomes very hot during use. DO NOT TOUCH!

6. The **'READY'** light is illuminated when the coffee has been brewed. The coffee is kept at serving temperature by the percolator.
7. Turn the **ON/OFF** switch to **O** (OFF position) when the level indicator is almost empty, or the equivalent of 3 cups of coffee is left in the urn, to prevent any damage to the heating element.

Note: DO NOT allow the appliance to boil dry. This invalidates the warranty.

Serving

- Place a suitable vessel beneath the tap.
- Pull the tap towards you to begin dispensing the coffee.
- Raise the tap handle to close the tap.

Emptying the Appliance

Drain the appliance by using the tap to empty the urn.

Thermal Cut-Out Reset

This appliance is fitted with a Thermal Cut-Out safety feature. Should the temperature exceed safe levels, the appliance will automatically cut power.

The Safety Cut-out switch is located on the underside of the appliance. To reset the appliance:

1. Empty the appliance and allow to cool.
2. Press the reset button until it clicks.

WARNING: Ensure the appliance has cooled down and is empty before resetting the switch, as it may need to be tipped slightly to gain access to the switch.

3. The appliance is now reset and can be used as normal.

Cleaning, Care & Maintenance

Always turn off and disconnect the appliance from the power supply before cleaning.

- Use soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.

De-scaling

For the best water quality, HOST recommend that a water filter is installed to the mains water supply, particularly in hard water areas. Doing so will reduce the build up of limescale and contaminants in the water tank thus maintaining energy efficiency and prolonging the life of the appliance.

To de-scale the appliance:

1. Pour a solution of de-scaler and water into the appliance.
2. Brush the interior gently with a soft bristled brush.
3. Discard the solution collected in the jug.
4. Fill the appliance with clean water and turn back On to flush out the system. Flush out the system thoroughly to remove any de-scaler residue.
5. The appliance is now ready for use.

Note: Use a suitable de-scaler and always follow the instructions on the container.

HOST recommend that this appliance is de-scaled every 3 months or more frequently in hard water areas.

IMPORTANT: Failure to de-scale or maintain will invalidate your guarantee.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
	Thermal cut-out switch has activated	Reset Thermal cut-out switch
The appliance turns on but does not make coffee	Lime scale build up in Percolator tube	De-scale appliance
The tap is leaking	The tap has become loose	Tighten the tap handle

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Capacity	Weight (Full)	Brewing Time when full (Approx.)	Dimensions (W x D x H) (mm)
HOST0664CP	220-240V~50/60Hz	1500W	6A	15 litres	20kg	60 minutes	510 x 362 x 287

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

The appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

The appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number **HOST0664CP** **15Ltr Coffee Percolator**

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019
BS EN 60335-2-75	2004 +A1:2005 +A11:2006 +A2:2008 +A12:2010
BS EN 62233	2008
BS EN 55014-1	2017
BS EN 55014-2	2015
BS EN IEC 61000-3-2	2019
BS EN 61000-3-3	2013 +A1:2019

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by: 

Full Name **Jess Attree**

Title: **General Manager**

Location: Chepstow, Great Britain

Date: **20th June 2022**



www.host-appliances.com

HOST0664CP_EN_A5_v1_2022/08/17