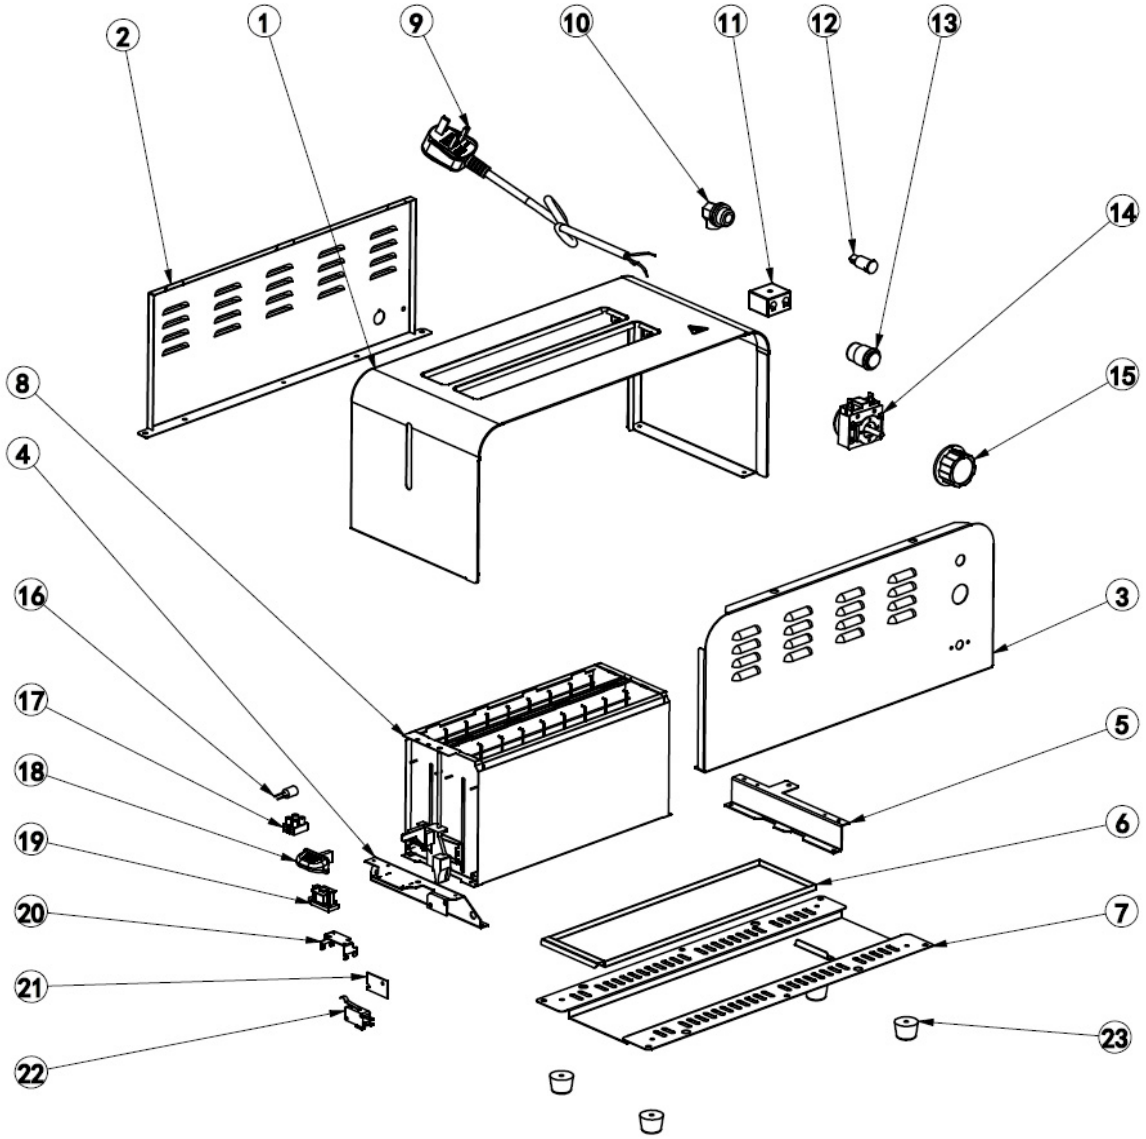


☎ Technical & Spares helpline 0845 111 0538
spares@uropa-service.co.uk

Machine	Explode	Code	Description
JB575 - Nisbets Essentials 2 Slot Toaster	1	☎	Body Frame
JB575 - Nisbets Essentials 2 Slot Toaster	2	☎	Rear Panel
JB575 - Nisbets Essentials 2 Slot Toaster	3	☎	Front Panel
JB575 - Nisbets Essentials 2 Slot Toaster	4	☎	Left Support Bracket
JB575 - Nisbets Essentials 2 Slot Toaster	5	☎	Right Support Bracket
JB575 - Nisbets Essentials 2 Slot Toaster	6	AU925	Crumb Tray
JB575 - Nisbets Essentials 2 Slot Toaster	7	☎	Bottom Cover Plate
JB575 - Nisbets Essentials 2 Slot Toaster	8	☎	Internal Components(Heating Element）
JB575 - Nisbets Essentials 2 Slot Toaster	9	AS582	UK Power Cord
JB575 - Nisbets Essentials 2 Slot Toaster	10	AL187	Power Cord Connector
JB575 - Nisbets Essentials 2 Slot Toaster	11	☎	Terminal Row
JB575 - Nisbets Essentials 2 Slot Toaster	12	AS007	Green Indicator Light
JB575 - Nisbets Essentials 2 Slot Toaster	13	AU926	Switch
JB575 - Nisbets Essentials 2 Slot Toaster	14	AK239	Timer
JB575 - Nisbets Essentials 2 Slot Toaster	15	AJ262	Knob
JB575 - Nisbets Essentials 2 Slot Toaster	16	☎	Electrolytic Capacitor
JB575 - Nisbets Essentials 2 Slot Toaster	17	☎	Connecting Terminal
JB575 - Nisbets Essentials 2 Slot Toaster	18	☎	Plastic Lever
JB575 - Nisbets Essentials 2 Slot Toaster	19	☎	Electromagnet
JB575 - Nisbets Essentials 2 Slot Toaster	20	☎	Electromagnetic Mounting Plate
JB575 - Nisbets Essentials 2 Slot Toaster	21	☎	Insulation Board
JB575 - Nisbets Essentials 2 Slot Toaster	22	AU927	Microswitch
JB575 - Nisbets Essentials 2 Slot Toaster	23	AK017	Rubber Feet (set 4)

☎ Technical & Spares helpline 0845 111 0538
spares@uropa-service.co.uk