


BOLERO

DN642 Cast Iron Budget Table Base

Assembly Instructions

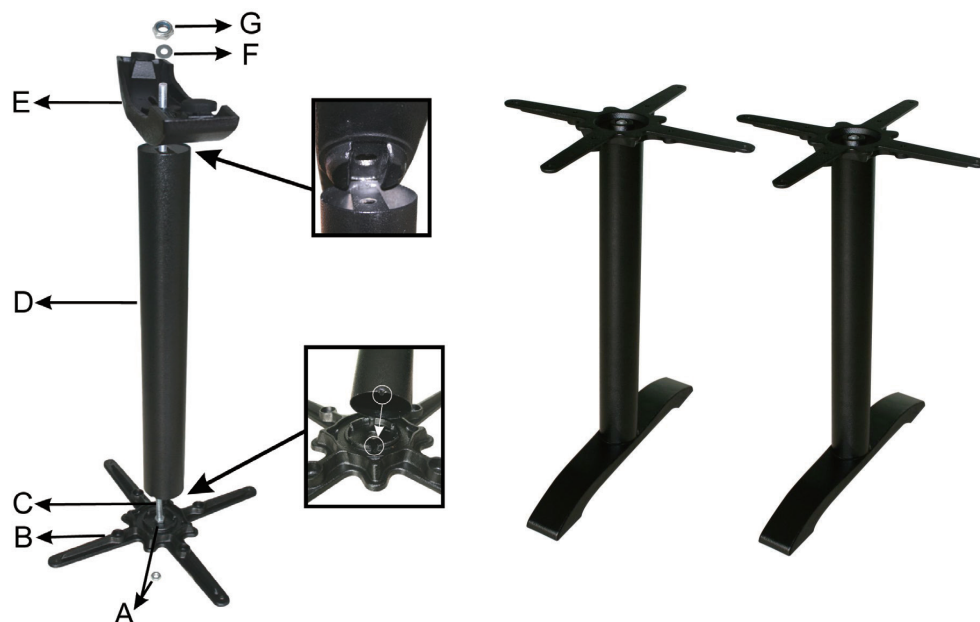

A		4pcs
B		2pcs
C		2pcs
D		2pcs
E		2pcs
F		2pcs
G		2pcs

UK	0845 146 2887	Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom
NL	0800 – 29 1 29	
	040 – 2628080	
FR	0800 - 29 2 29	
	01 60 34 28 80	
DE	0800 – 1860806	
IT	N/A	
ES	901-100 133	
PT	vendas@nisbets.pt	
AU	1300 225 960	15 Badgally Road, Campbelltown, 2560, NSW, Australia



Important!

Please note screws required to fix the base to the Bolero predrilled table tops are supplied with the table top carton.

Before assembly, carefully remove all packaging and ensure all parts are present.

Please periodically check and tighten assembly.

Once assembled please do not attempt to move or lift the table by pulling the table top as this will cause damage to top!

DN642_A5_v3_20190516