


#### WASHROOMSOLUTIONS

# **Auto Foam**

Easy, Step-By-Step Guide to Inserting Auto Foam Refills

## **Opening the Dispenser**

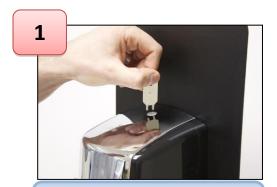

Insert key and turn clockwise to unlock the Auto Foam dispenser.



Slowly guide the Auto Foam's cover down to open.

# Inserting the Refill



Begin by inserting the Auto Foam refill into the holder.



Next, carefully guide the refill nozzle through the slot in the holder.





WASHROOMSOLUTIONS

A Newell Rubbermaid, Brand

## Inserting the Refill (Continued)



Next, guide the refill nozzle into place.



Then the refill will "click" once pressed into place. The refill is now inserted properly into the Auto Foam Dispenser.

# **Closing the Dispenser**





Carefully close the dispenser cover by using your fingers to tuck refill.



Dispenser will "Click" when it is properly closed and locked. The Auto Foam system is ready for use.



