

C41 Hi Temp Rapid Degreaser

Professional Detergent with specific formula developed for cleaning hot surfaces and SpeedLight

This product thoroughly removes dirt and grease from the plates. It works at high temperatures, facilitating the cleaning of the equipment.

Applications

Cooking plates and grills and in particular Electrolux Professional SpeedLight



Description

The **C41 Hi-Temp Rapid Degreaser** ensures efficient and extended working of the machine:

- Developed for the daily cleaning of the equipment to ensure best performance
- Easy and ready to use
- compatible with glass, silicon, Teflon-coated plates
- No need to wait for a cool plate → should be used on very hot plates (170-180°C; 338-356°F)

Chemical-physical characteristics

Appearance	Clear liquid
Colour	Yellow
Odour	Characteristic, weak
Relative density	1.28 g/ml ± 0.01 g/ml
Water solubility	Complete in every ratio
pH	11.8 - 12.3
Chemical nature	Non-ionic



Scan the QR code to view the safety data sheet

pH



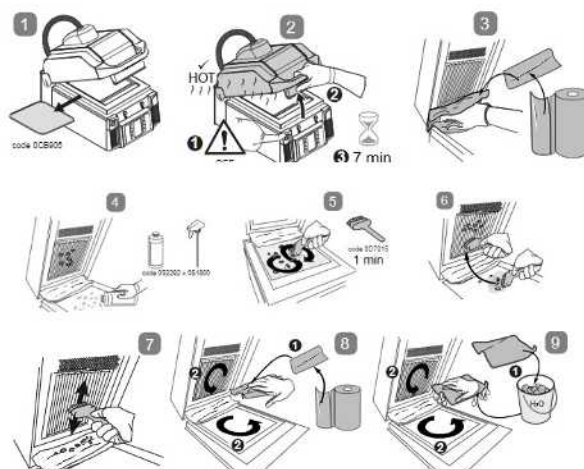
Rev. 08 Ed. 08/23

Electrolux Professional

www.electroluxprofessional.com

Instructions for use for SpeedeLight

1. turn off the machine and remove the tray (0CB905)
2. wait about 7 min. to cool the plates down to 170 °C–180 °C (338–356°F)
3. Apply a rag of paper between the working top and the lid as shown in Figure 3.
4. Spray/pour the product on the glass
5. Spread it over the glass for at least 1min to allow the product to activate (it becomes darker and stops bubbling). Use the specific brush (code 0D7015)
6. Using the same brush, spread the product on the upper plate
7. Scrub the upper plate with the same brush
8. Wipe with paper to remove dirt and detergent
9. Rinse with a damp cloth:
 - The glass and the working top
 - The upper plate and the lid


Accessories to be used with the product

0D7015	Brush
0S2057	Trigger for 1LT bottle
0S2058	Extension to facilitate the product dosage
0S2985	Heat resistant gloves

Package and code

6 x 1L bottles – code 0S2292

Warnings:

- the product is for professional use only; do not use in domestic appliances.
- transport and storage must be done only in the original package, upright position.
- do not expose to sunlight and freezing temperatures.
- do not transfer in other bottles.
- do not mix with other products.
- to be used within 30 months after the production date.
- the package and containers are totally recyclable.
- please handle the emptied material according to the local recycling regulation.

0D7015



0S2985

