

HOST

Heated Banquet Cabinet

Instruction manual

Model:

HOST0735BC



**Read this instruction
manual carefully
before use**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Warning! Hot surface!**
- This product is only designed to store food temporarily. Do not use for laboratory or industrial purposes.
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use the appliance to store medical supplies.
- DO NOT use electrical appliances inside the appliance (e.g. heaters, ice-cream makers, etc.).
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs.
- DO NOT store products on top of the appliance.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.



- If the power cord is damaged, it must be replaced by a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- HOST recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- HOST recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Installation



1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
2. Maintain a distance of 20cm (7 inches) between the unit and walls or other objects for ventilation.

Note: Before using the appliance for the first time, clean the interior with soapy water.

3. Set the brakes on the castors to keep the appliance in position.

Fitting the pan supports and water trays

1. Place support bar on the ladder at the desired height, mounting the rear end of the support bar to the ladder first.

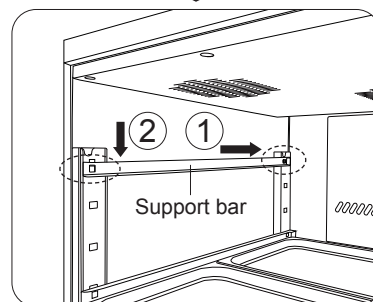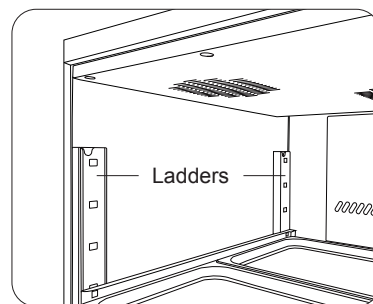


2. Repeat for the remaining support bars.
3. Slide the GN pans/shelves into place.

- Fix the water trays as instructed below.


Square water tray

Directly push into the support brackets on the underside of the cabinet.

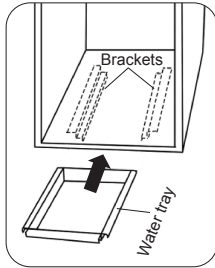

Rectangular water tray

Hang onto the pre-mounted bolts on the interior back wall, ensuring it is fixed in place.

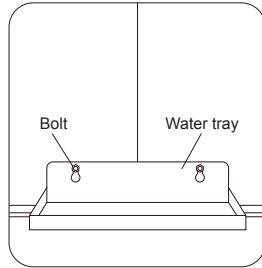

Operation

Control panel

The control panel is located above the door on the front of the appliance.	Cabinet Temperature Display
	Fan On
	Down button
	On / Off button: Press and hold for 3 seconds to switch system on / off
	Up Button

Turn On

- Put the food in and close the door.
- Connect the appliance to a mains power supply.
- Press and hold for 3 seconds.

Adjusting the Temperature

- Press for 1 second. The set temperature will flash.
- Press the up button or down button to change the set temperature.
- Wait 6 seconds for the set temperature to be stored.

Parameter Setting

The operating parameters of this appliance have been preset for optimum performance and to maximise the life of the appliance.

The default value of set temperature is 75°C.

Parameter	Function	Range	Default
PAS	Password	0 ~ 100	15
E1	Lower setpoint temperature	25°C ~ SET	70°C
E2	Upper setpoint temperature	SET ~ 85°C	82°C
E3	Temperature hysteresis	1°C ~ 10°C	4°C
E4	Time delay of starting machine	1 ~ 8 min.	3 min.
E5	Temperature probe adjustment	-5°C ~ +5°C	0°C

Should the parameter need adjusting:

- Press twice. The display will show "PAS".
- Press or to input correct password (The default value is 15).
- Press to confirm. The system enters the parameter code selecting mode.
- Press to select the desired parameter code. The display will show the lower setpoint limit, the higher setpoint limit, the temperature hysteresis, time delay of starting the machine, and the Cabinet temperature probe adjustment consecutively.
- Press to confirm. The system enters the parameter value setting mode. Press or until the required value is displayed.
- Press again to confirm the selected parameter value. The system now exits the parameter value setting mode and returns to the previous parameter code selecting mode.

Note: If the password is correct, you can adjust parameters. Otherwise, you can only view parameters.

Cleaning, Care & Maintenance

Switch off and disconnect the appliance from the power supply. Allow to cool down before cleaning.

- Clean the interior of the appliance as often as possible.
- Do not use abrasive cleaning agents. These can leave harmful residues.
- Clean the door seal with warm soapy water.
- Always wipe dry after cleaning.

Cleaning the water trays

- Empty the tray on the interior back wall. Wipe dry with a kitchen towel if needed.
- Pull the other tray out of the brackets on the underside. Empty and Wipe dry.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the fuse
	Mains power supply fault	Check mains power supply
Poor heating effect	Poor ventilation	Increase ventilation
	Door is opened frequently or not shut properly	Check door is shut and seals are not damaged
	Food is too cold or too much food in the appliance	Remove excessive food
	Temperature improperly set	Re-set the temperature
Loud noises	The appliance has not been installed in a level or stable position	Check installation position and change if necessary
	Loose screw/nut	Check and tighten all nuts and screws
Odour from the unit	Unit is not cleaned for long time	Clean the unit thoroughly
	Odour foods are not properly packed	Seal and pack odour foods properly

Service

Should your appliance have a fault, please visit the Service section of the HOST website.

Technical Specifications

Model	Voltage	Power	Current	Temperature range	Capacity	Dimensions (H x W x D) (mm)	Weight (kg)
HOST0735BC	220-240V~ 50/60Hz	1430W	6.5A	70°C ~ 82°C	345L	1770 x 872 x 781	110

Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



HOST parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of HOST.
Every effort is made to ensure all details are correct at the time of going to press, however, HOST reserve the right to change specifications without notice.

HOST UKCA Declaration of Conformity



We {Host} of {Host House, Newhouse Farm Industrial Estate, Mathern, Chepstow, NP16 6UP} hereby declare that the equipment is in conformity with the requirements of the following Regulations:

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

We hereby declare that:

Equipment Model number **HOST0735BC** **Large Heated Banquet Cabinet**

is in conformity with the applicable requirements of the following documents

Ref. No.	Edition/date
BS EN 60335-1	2012 + A11:2014 + A13:2017 + A1:2019 + A14:2019 + A2:2019 + A15:2021
BS EN 60335-2-49	2003 + A1:2008 + A11:2012 + A2:2019
BS EN 62233	2008
EN IEC 61000-6-3	2021
EN IEC 61000-6-1	2019

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Regulations:

Signed by:

DocuSigned by:

Full Name **Jess Atiles**

Title: **General Manager**

Location: Chepstow, Great Britain

Date: **22nd June 2022**



www.host-appliances.com

HOST0735BC_EN_A5_v1_2022/08/17