


VOGUE

Digital Bench Scale

Instruction manual

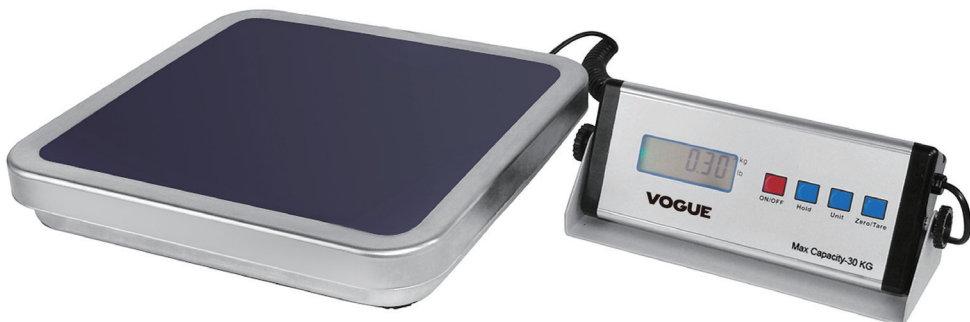

Caution: Read the instructions before using the appliance

**Model:
CD564-A**

Safety Instructions

- Do not expose the scale to direct sunlight to avoid any malfunction.
- Do not overload as this may cause damage.


Setup

1. Position the appliance on a flat, stable surface.
2. Adjust the feet of the appliance to make it level, use a spirit level if necessary.

It is important that the scale is level to ensure accuracy.

Note: These scales are not government stamped, and as such are unsuitable for use as retail food scales.

Note: The accuracy of this device has been tested as part of the manufacturing quality control process.

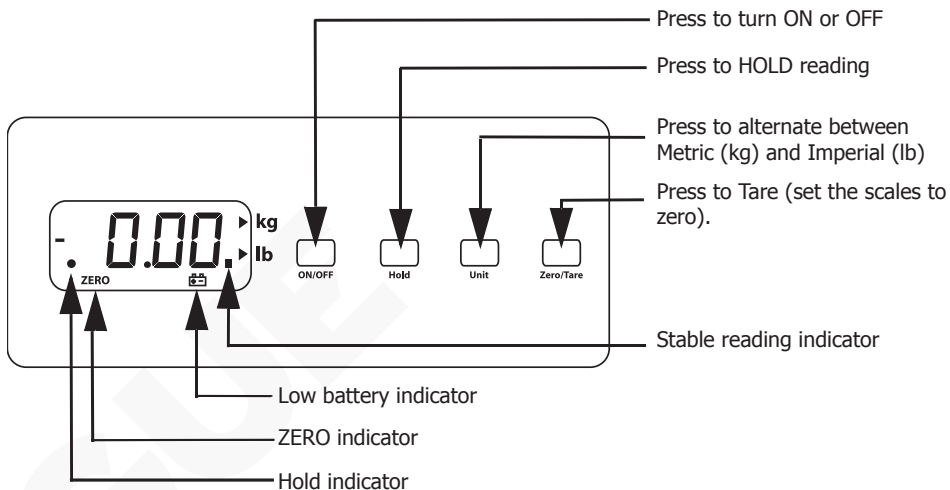

Features

To enter the features mode:

- Press the ON/OFF button such that the scales are switched OFF.
- Press and hold the HOLD button then press the ON/OFF button whilst keeping the HOLD button depressed. Release both buttons, the display should show either "A_ON" or "A_OFF".

To allow the scales to switch off automatically:

- Press the ZERO/TARE button and the display will cycle between "A_ON" (automatic switch off is On) and "A_OFF" (automatic switch off is Off).

To have the display backlight On:

- Press the HOLD button, the display should show either "L_ON" or "L_OFF".
- Press the ZERO/TARE button and the display will cycle between "L_ON" (backlight On) and "L_OFF" (backlight Off).

Note: The HOLD button will cycle between the Auto Switch Off and Backlight functions.

Once complete, Press the ON/OFF button to save the settings.

Cleaning, Care & Maintenance

- Remove the batteries (if fitted) and/or unplug the adaptor before cleaning or if the scales are to be left unused for an extended period of time.
- Clean the weighing tray with warm, soapy water.
- Dry thoroughly after washing.
- Do not immerse the scales in water.
- Always unplug the adaptor when not in use to prevent over heating.

Calibration

Calibration requires an accurate 30kg weight.

- Press the ON/OFF button such that the scales are switched OFF.
- Press and Hold the ZERO/TARE button then press the ON/OFF button whilst keeping the ZERO/TARE button depressed. Release both buttons, the display should show a four digit value.
- Wait for the Stable reading indicator to be displayed then press the UNIT button. "Save0" should be displayed.
- Place a 30kg weight on the scales and wait for the Stable reading indicator to be displayed. Press the UNIT button and "Save1" should be displayed.
- Calibration is complete, remove the weight and Press the ON/OFF button to save the settings.
- If the calibration does not appear accurate repeat the process ensuring that the scales are placed on a level surface.

Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Power	Weigh Pan Dimensions	Minimum Weight	Maximum Weight	Measuring Increments
CD564-A	9V Adaptor or 6 x 1.5V AA Batteries	315 x 325mm	20g (1oz)	30kg (66lbs)	10g (0.5oz)

Compliance

Dispose of depleted batteries in accordance with local regulations, within the EC there are nominated disposal points for batteries.

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

VOGUE parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

VOGUE products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of VOGUE. Every effort is made to ensure all details are correct at the time of going to press, however, VOGUE reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

- Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo		Model • Modèle • Modell • Modello • Modelo
Electric Scale - 30kg capacity		CD564
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo	Low Voltage Directive (LVD) - 2014/35/EU Electrical Equipment (Safety) Regulations 2016 EN 60335-1:2012 +A11:2014 +A13:2017 +A1:2019 +A14:2019 +A2:2019 +A15:2021 EN 60335-2-29:2021 +A1:2023 EN 62233:2008 EK1 527-12 Rev.2 EK1 557-13 Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091) EN IEC 55014-1: 2021 EN IEC 55014-2: 2021 EN IEC 61000-3-2: 2019+A1:2021 EN 61000-3-3: 2013+A1:2019 Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)	Electrical Safety AS/NZS 61558.1: 2018+A1: 2020 +A2: 2020 AS/NZS 61558.2.16: 2022+A1: 2023 Electromagnetic Compatibility EN IEC 55014-1: 2021 EN IEC 55014-2: 2021 EN IEC 61000-3-2: 2019+A1:2021 EN 61000-3-3: 2013+A1:2019
Manufacturer Name • Naam fabrikant • Nom du fabricant • Name des Herstellers • Nome del fabbricante • Nombre del fabricante		Vogue

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.



Date • Data • Date • Datum • Data •
Fecha

Signature • Handtekening •
Signature • Unterschrift Firma •
Firma

Full Name • Volledige naam • Nom et
prénom • Vollständiger Name • Nome
completo • Nombre completo

Position • Functie • Fonction •
Position • Qualifica • Posición

Manufacturer Address • Adres
fabrikant • Adresse du fabricant •
Adresse des Herstellers • Indirizzo del
fabbricante • Dirección del fabricante

04th Nov 2025		
Signed by:  ASB6DB7658FFB441...	DocuSigned by:  D352874F7FAB460...	
Ashley Hooper	Eoghan Donnellan	
Group Head of Product Quality & Compliance	Commercial Manager/Importer	
Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom	15 Badgally Road, Campbelltown NSW 2560	Unit 9003, Blarney Business Park, Blarney, Co. Cork Ireland



VOGUE

voque-cookware.com
enquiries@voque-cookware.com



CD564-A_A5_v5_2025/12/17