

apuro

Bar Blender
Instruction manual



Model:
HX583-A

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- This appliance is only used for blending food. Do not use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- DO NOT let cord hang over edge of table or counter, or touch hot surfaces.

- Keep hands and utensils out of the jug while motor is running to prevent severe personal injury and / or damage to the blender.
- **Blade is sharp – handle carefully.**
- Never try to remove blade while jug is sitting on the blender base.
- DO NOT operate with loose or damaged blades.
- Always operate with lid in place.
- DO NOT blend Hot Liquids.
- DO NOT leave blender unattended while in use.
- Apuro recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Only use original Apuro parts and attachments with this appliance, or your guarantee will be invalidated.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Product Description

HX583-A - Apuro Digital Silent Bar Blender with Sound Enclosure

Pack Contents

The following is included:

- Apuro Blender
- Blender Jug, lid and lid plug
- Food pusher
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.


Installation

1. Remove the unit from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
2. While positioning on a worktop, ensure the feet are level to reduce vibration during operation.

Operation



Control panel

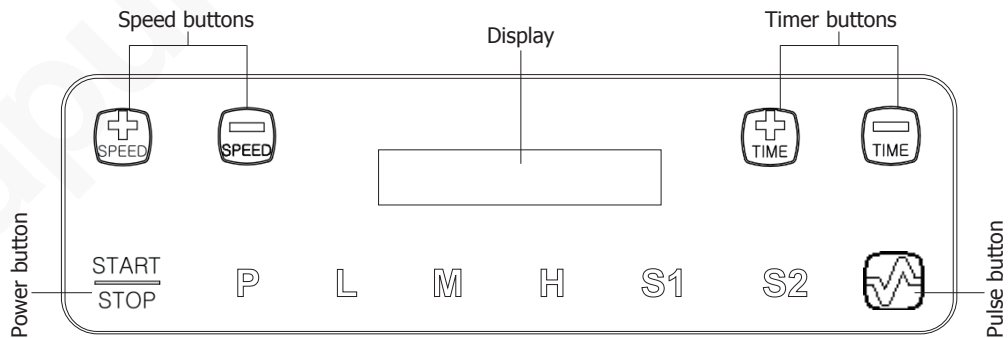

| Button name | Description | Default setting | Customisation allowed / DIY settings |
|-------------|----------------------------|--|---|
| P | Wave Mode | Alternates between low and high speeds for 30 seconds | Customise program time only |
| L, M, H | Low/Medium/High speed mode | Runs at a set speed for 30/60/90 seconds | Customise speed and program time |
| S1, S2 | Saved User Programs | Designed for users to customise according to their specific requirements | Amend speed and program time for up to 6 program stages |

Blending



Before use, ensure to:

- **Disconnect blender from the power supply.**
- **Clean all removable parts thoroughly and dry well.**

1. Connect blender to the power supply.
2. Place ingredients into jug.
3. Secure the lid and lid plug.
4. Locate jug onto the motor base and close the sound enclosure. The power button will flash.
5. Press the power button to enter Standby and all buttons will light up.
6. Select a desired mode to start blending.
7. The blender will turn off automatically when the set time expires.
8. Disconnect from power supply after use.

- **Note: Equipped with an interlock switch, the blender will stop automatically when the sound enclosure is opened.**
- **To avoid overheating or damage, do not let the appliance run at the MAX speed continuously for more than 2 minutes. Afterwards, ensure to let it rest for 2 minutes.**
- **Let the motor come to a complete stop before removing the jug.**

Wave mode

Wave mode is a pre-set program designed to alternate between low and high speeds for 30 seconds. It is possible to adjust the program time length by following the instructions below.

1. Press and hold **"P"** until the display shows "DIY" with 1 beep sound.
2. Press the timer buttons to adjust timer from 1s to 300s. (Speed cannot be adjusted in this mode.)
3. Press **"P"** to save the settings or press the power button to cancel.

Low speed mode

DIY setting:

1. Press and hold **"L"** until the display shows "DIY" with 1 beep sound.
2. Press the speed buttons to adjust speed from level P1 to P9 and press the timer buttons to adjust timer from 1s to 300s.
3. Press **"L"** to save the settings and return to Standby, or press the power button to cancel.

| Medium speed mode | High speed mode |
|--|-----------------|
| DIY setting: Refer to the DIY settings for the low speed mode. | |

S1 mode

Default setting: Press **"S1"** to run the pre-set program at speed level P13 for 60 seconds.

DIY setting:

1. Press and hold **"S1"** until the display shows "Sp:0" and "0:00" with 1 beep sound. For this program, a total of 6 stages can be set.
2. Press the speed buttons to adjust speed from level P1 to P25 and press the timer buttons to adjust timer from 1s to 300s. Then press **"S1"** to confirm and set Stage 2.
3. Repeat step 2 to set for stages 3, 4, 5, and 6.
4. Press **"S1"** to save the settings and return to Standby.

S2 mode

Default setting: Press **"S2"** to run the pre-set program at speed level P3 for 25 seconds.

DIY setting: Refer to the DIY settings for the S1 mode.

Pulse mode

Press and hold the pulse button to run at MAX speed. Release to stop.

How to reset

Reset to default setting: Press and hold both speed buttons until 1 beep sounds and the power button flashes.

Reset number of usage to zero: Press and hold both timer buttons until 1 beep sounds.

Cleaning, Care & Maintenance

- **Always disconnect from power supply before cleaning.**
- **Always allow to cool before cleaning.**
- **The jug is NOT dishwasher safe!**
- Use warm, soapy water and a damp cloth to clean the jug.
- Use a damp cloth to clean the mat on the motor base.
- Dry thoroughly after cleaning.



Mat

Warning: Blade is sharp - handle with care.

Do not allow any water to spill into the motor base when cleaning.

Never attempt to remove the blade assembly from the jar for cleaning as its removal requires special tools and can only be carried out by our service personnel.

Cleaning the jug and blade assembly

- Add water and mild detergent into the jug, then locate the lid and lid plug.
- Secure the jug on the motor base and turn on at MAX speed for 10-20 seconds.
- Turn off and remove the jug, then rinse with clean water thoroughly. Ensure no water will get contact with the underside of the jug.

Troubleshooting

A qualified technician must carry out repairs if required.

| Fault | Probable Cause | Solution |
|-----------------------------|--|--|
| The unit is not working | The unit is not switched on | Check the unit is plugged in correctly and switched on |
| | Plug or lead is damaged | Replace plug or lead |
| | Mains power supply fault | Check mains power supply |
| | Jug incorrectly located on body of unit | Relocate Jug |
| Unit stops working suddenly | Motor overheating protection is activated | Switch off and unplug. Wait to let the motor to cool sufficiently for approx. 20 minutes, then restart |
| | The sound enclosure is opened during operation | Close the sound enclosure |

Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

| Model | Voltage | Power | Current | Jug Capacity | Dimensions h x w x d mm | Weight |
|---------|----------------------|-------|---------|--------------|----------------------------|--------|
| HX583-A | 220-240V~ 50/60Hz | 1680W | 7.6A | 1.8L | 487 x 246 x 271 | 9.1kg |

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

- Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
- Declaración de conformidad • Declaração de conformidade

| | |
|---|---|
| Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo | Model • Modèle • Modell • Modello • Modelo |
| Digital Silent Bar Blender | HX583-A |
| Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo | Electrical Safety IEC 60335-1: 91 +A1:94 +A2:99 IEC 60335-2-64: 97 +A1:00 EN ISO 12100:2010 Electro-Magnetic Compatibility EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2: 2019 +A1:2021 EN 61000-3-3: 2013 +A1: 2019 +A2: 2021 |
| Manufacturer Name • Naam fabrikant • Nom du fabricant • Name des Herstellers • Nome del fabbricante • Nombre del fabricante | Apuro |

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Date • Data • Date • Datum • Data
• Fecha

Signature • Handtekening • Signature
• Unterschrift Firma • Firma

Full Name • Volledige naam • Nom et prénom • Vollständiger Name • Nome completo • Nombre completo

Position • Functie • Fonction • Position • Qualifica • Posición

Manufacturer Address • Adres fabrikant • Adresse du fabricant • Adresse des Herstellers • Indirizzo del fabbricante • Dirección del fabricante

| | |
|--|---|
| 27 th Sep 2024 | |
| DocuSigned by: <i>Ashtley Hooper</i> B39382C9FD9C478... Ashtley Hooper | DocuSigned by: <i>Brendan</i> 386FAD00DFE8483... brendan lenmeade |
| Group Head of Product Quality & Compliance | Commercial Manager/ Responsible Supplier |
| Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom | 15 Badgally Road, Campbelltown NSW 2560 |





HX583-A_A5_v1_2025/01/21